SUN2000-(2KTL-6KTL)-L1

User Manual

 Issue
 20

 Date
 2024-05-30





HUAWEI TECHNOLOGIES CO., LTD.

Copyright © Huawei Technologies Co., Ltd. 2024. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions

NUAWEI and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd. All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base Bantian, Longgang Shenzhen 518129 People's Republic of China

Website: <u>https://e.huawei.com</u>

About This Document

Purpose

This document describes the SUN2000-(2KTL-6KTL)-L1 in terms of its installation, electrical connection, commissioning, maintenance, and troubleshooting. Before installing and operating the inverter, ensure that you are familiar with the features, functions, and safety precautions provided in this document.

Intended Audience

This document is Applicable to:

- Installers
- Users

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol Description		
	Indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.	
	Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.	
	Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.	
NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results.	
	NOTICE is used to address practices not related to personal injury.	

Symbol	Description
☐ NOTE	Supplements the important information in the main text. NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

Change History

Changes between document issues are cumulative. The latest document issue contains all the changes made in earlier issues.

Issue 20 (2024-05-30)

- Updated 2.1 Overview.
- Updated 5.2 Preparing Cables.

Issue 19 (2024-01-31)

Updated 2.1 Overview.

Issue 18 (2024-01-12)

- Updated 5.2 Preparing Cables.
- Updated 5.9 (Optional) Connecting Signal Cables.
- Updated 8.3 Troubleshooting.
- Updated 10 Technical Specifications.
- Updated A Grid Code.

Issue 17 (2023-11-03)

Updated 5.6 Connecting an AC Output Power Cable.

Issue 16 (2023-09-30)

Updated 7.2.1.4 Capacity Control.

Issue 15 (2023-09-06)

Updated A Grid Code.

Issue 14 (2023-08-23)

Updated **D Rapid Shutdown**.

Issue 13 (2023-07-30)

Updated 2.3 Label Description.

Updated 10 Technical Specifications.

Issue 12 (2023-06-01)

Updated 2.1 Overview.

Issue 11 (2023-04-10)

Updated A Grid Code.

Issue 10 (2023-02-13)

- Updated 5.2 Preparing Cables.
- Updated 5.9 (Optional) Connecting Signal Cables.
- Updated 7.1.3 Creating a PV Plant and a User.
- Updated 7.1.4 (Optional) Setting the Physical Layout of the Smart PV Optimizers.
- Updated 7.2 Parameters Settings.

Issue 09 (2022-08-25)

- Updated 5.2 Preparing Cables.
- Updated 5.6 Connecting an AC Output Power Cable.
- Added 7.2.1.4 Capacity Control.
- Updated 10 Technical Specifications.
- Updated A Grid Code.
- Added F AI Energy Management Assistant (EMMA).
- Added Contact Information.

Issue 08 (2022-06-01)

Updated **10 Technical Specifications**.

Issue 07 (2022-03-04)

- Updated 5.9 (Optional) Connecting Signal Cables.
- Updated **C Resetting Password**.
- Updated **D Rapid Shutdown**.

Issue 06 (2022-01-13)

- Updated 5.8 (Optional) Connecting Battery Cables.
- Updated 5.9 (Optional) Connecting Signal Cables.
- Updated 7.1.3 Creating a PV Plant and a User.
- Updated 7.2.1 Energy Control.
- Updated 10 Technical Specifications.

Issue 05 (2021-08-10)

- Updated 5.7 Connecting DC Input Power Cables.
- Updated 5.8 (Optional) Connecting Battery Cables.
- Updated 5.9 (Optional) Connecting Signal Cables.
- Updated 7.1 App Commissioning.
- Updated 7.2.1.3 Battery Control.
- Updated **B Device Commissioning**.
- Updated **D Rapid Shutdown**.

Issue 04 (2021-04-01)

- Updated 5.2 Preparing Cables.
- Updated 6.2 System Power-On.
- Updated 8.3 Troubleshooting.

Issue 03 (2020-09-15)

- Updated 5.3 Connecting PE Cables.
- Updated **8.3 Troubleshooting**.

Issue 02 (2020-06-09)

- Updated 4.2 Preparing Tools and Instruments.
- Updated 5.2 Preparing Cables.
- Updated 5.7 Connecting DC Input Power Cables.
- Updated 5.9 (Optional) Connecting Signal Cables.
- Updated 7.1.4 (Optional) Setting the Physical Layout of the Smart PV Optimizers.
- Updated C Resetting Password.

Issue 01 (2020-04-17)

This issue is the first official release.

Contents

About This Document	ii
1 Safety Information	1
1.1 Personal Safety	2
1.2 Electrical Safety	4
1.3 Environment Requirements	7
1.4 Mechanical Safety	8
2 Product Introduction	13
2.1 Overview	
2.2 Component Description	
2.3 Label Description	19
2.4 Working Principles	21
3 Storage Requirements	24
4 System Installation	
4.1 Checking Before Installation	25
4.2 Preparing Tools and Instruments	26
4.3 Determining the Installation Position	27
4.4 Moving a Inverter	31
4.5 Installing a Inverter	
4.5.1 Wall-Mounted Installation	
4.5.2 Support-Mounted Installation	34
5 Electrical Connection	
5.1 Precautions	
5.2 Preparing Cables	39
5.3 Connecting PE Cables	
5.4 (Optional) Installing a Smart Dongle	
5.5 Installing a WLAN Antenna	
5.6 Connecting an AC Output Power Cable	48
5.7 Connecting DC Input Power Cables	
5.8 (Optional) Connecting Battery Cables	
5.9 (Optional) Connecting Signal Cables	59
6 System Commissioning	

	66
6.1 Verification Before Power-On6.2 System Power-On	
7 Man-Machine Interaction	
7.1 App Commissioning	
7.1.1 Downloading the FusionSolar App	
7.1.2 (Optional) Registering an Installer Account	
7.1.3 Creating a PV Plant and a User	
7.1.4 (Optional) Setting the Physical Layout of the Smart PV Optimizers	
7.2 Parameters Settings	
7.2.1 Energy Control	
7.2.1.2 Apparent Power Control on the Inverter Output Side7.2.1.3 Battery Control	
7.2.1.3 Battery Control	
7.2.2 AFCI	
7.2.2 Al Climate 7.2.2 Al Climate 7.2.3 IPS Check (for Italy CEI0-21 Grid Code Only)	
7.2.4 DRM (Australia AS4777)	
8 System Maintenance	
8.2 Routine Maintenance	
8.3 Troubleshooting	
9 Inverter Disposal	
9.1 Removing a Inverter	
9.2 Packing a Inverter	
9.3 Disposing a Inverter	
10 Technical Specifications	94
A Grid Code	
B Device Commissioning	
C Resetting Password	110
D Rapid Shutdown	
E Locating Insulation Resistance Faults	
F AI Energy Management Assistant (EMMA)	
G Contact Information	
H Acronyms and Abbreviations	

Safety Information

Statement

Before transporting, storing, installing, operating, using, and/or maintaining the equipment, read this document, strictly follow the instructions provided herein, and follow all the safety instructions on the equipment and in this document. In this document, "equipment" refers to the products, software, components, spare parts, and/or services related to this document; "the Company" refers to the manufacturer (producer), seller, and/or service provider of the equipment; "you" refers to the entity that transports, stores, installs, operates, uses, and/or maintains the equipment.

The Danger, Warning, Caution, and Notice statements described in this document do not cover all the safety precautions. You also need to comply with relevant international, national, or regional standards and industry practices. The Company shall not be liable for any consequences that may arise due to violations of safety requirements or safety standards concerning the design, production, and usage of the equipment.

The equipment shall be used in an environment that meets the design specifications. Otherwise, the equipment may be faulty, malfunctioning, or damaged, which is not covered under the warranty. The Company shall not be liable for any property loss, personal injury, or even death caused thereby.

Comply with applicable laws, regulations, standards, and specifications during transportation, storage, installation, operation, use, and maintenance.

Do not perform reverse engineering, decompilation, disassembly, adaptation, implantation, or other derivative operations on the equipment software. Do not study the internal implementation logic of the equipment, obtain the source code of the equipment software, violate intellectual property rights, or disclose any of the performance test results of the equipment software.

The Company shall not be liable for any of the following circumstances or their consequences:

- The equipment is damaged due to force majeure such as earthquakes, floods, volcanic eruptions, debris flows, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weather conditions.
- The equipment is operated beyond the conditions specified in this document.

- The equipment is installed or used in environments that do not comply with international, national, or regional standards.
- The equipment is installed or used by unqualified personnel.
- You fail to follow the operation instructions and safety precautions on the product and in the document.
- You remove or modify the product or modify the software code without authorization.
- You or a third party authorized by you cause the equipment damage during transportation.
- The equipment is damaged due to storage conditions that do not meet the requirements specified in the product document.
- You fail to prepare materials and tools that comply with local laws, regulations, and related standards.
- The equipment is damaged due to your or a third party's negligence, intentional breach, gross negligence, or improper operations, or other reasons not related to the Company.

1.1 Personal Safety

▲ DANGER

Ensure that power is off during installation. Do not install or remove a cable with power on. Transient contact between the core of the cable and the conductor will generate electric arcs or sparks, which may cause a fire or personal injury.

A DANGER

Non-standard and improper operations on the energized equipment may cause fire, electric shocks, or explosion, resulting in property damage, personal injury, or even death.

DANGER


Before operations, remove conductive objects such as watches, bracelets, bangles, rings, and necklaces to prevent electric shocks.

A DANGER

During operations, use dedicated insulated tools to prevent electric shocks or short circuits. The dielectric withstanding voltage level must comply with local laws, regulations, standards, and specifications.

During operations, wear personal protective equipment such as protective clothing, insulated shoes, goggles, safety helmets, and insulated gloves.

Figure 1-1 Personal protective equipment

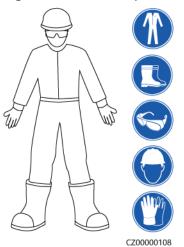

General Requirements

- Do not stop protective devices. Pay attention to the warnings, cautions, and related precautionary measures in this document and on the equipment.
- If there is a likelihood of personal injury or equipment damage during operations, immediately stop, report the case to the supervisor, and take feasible protective measures.
- Do not power on the equipment before it is installed or confirmed by professionals.
- Do not touch the power supply equipment directly or with conductors such as damp objects. Before touching any conductor surface or terminal, measure the voltage at the contact point to ensure that there is no risk of electric shock.
- Do not touch operating equipment because the enclosure is hot.
- Do not touch a running fan with your hands, components, screws, tools, or boards. Otherwise, personal injury or equipment damage may occur.
- In the case of a fire, immediately leave the building or the equipment area and activate the fire alarm or call emergency services. Do not enter the affected building or equipment area under any circumstances.

Personnel Requirements

- Only professionals and trained personnel are allowed to operate the equipment.
 - Professionals: personnel who are familiar with the working principles and structure of the equipment, trained or experienced in equipment operations and are clear of the sources and degree of various potential hazards in equipment installation, operation, maintenance

- Trained personnel: personnel who are trained in technology and safety, have required experience, are aware of possible hazards on themselves in certain operations, and are able to take protective measures to minimize the hazards on themselves and other people
- Personnel who plan to install or maintain the equipment must receive adequate training, be able to correctly perform all operations, and understand all necessary safety precautions and local relevant standards.
- Only qualified professionals or trained personnel are allowed to install, operate, and maintain the equipment.
- Only qualified professionals are allowed to remove safety facilities and inspect the equipment.
- Personnel who will perform special tasks such as electrical operations, working at heights, and operations of special equipment must possess the required local qualifications.
- Only authorized professionals are allowed to replace the equipment or components (including software).
- Only personnel who need to work on the equipment are allowed to access the equipment.

1.2 Electrical Safety

A DANGER

Before connecting cables, ensure that the equipment is intact. Otherwise, electric shocks or fire may occur.

▲ DANGER

Non-standard and improper operations may result in fire or electric shocks.

DANGER

Prevent foreign matter from entering the equipment during operations. Otherwise, equipment short-circuits or damage, load power derating, power failure, or personal injury may occur.


For the equipment that needs to be grounded, install the ground cable first when installing the equipment and remove the ground cable last when removing the equipment.

During the installation of PV strings and the inverter, the positive or negative terminals of PV strings may be short-circuited to ground if the power cables are not properly installed or routed. In this case, an AC or DC short circuit may occur and damage the inverter. The resulting device damage is not covered under any warranty.

Do not route cables near the air intake or exhaust vents of the equipment.

General Requirements

- Follow the procedures described in the document for installation, operation, and maintenance. Do not reconstruct or alter the equipment, add components, or change the installation sequence without permission.
- Obtain approval from the national or local electric utility company before connecting the equipment to the grid.
- Observe the power plant safety regulations, such as the operation and work ticket mechanisms.
- Install temporary fences or warning ropes and hang "No Entry" signs around the operation area to keep unauthorized personnel away from the area.
- Before installing or removing power cables, turn off the switches of the equipment and its upstream and downstream switches.
- Before performing operations on the equipment, check that all tools meet the requirements and record the tools. After the operations are complete, collect all of the tools to prevent them from being left inside the equipment.
- Before installing power cables, check that cable labels are correct and cable terminals are insulated.
- When installing the equipment, use a torque tool of a proper measurement range to tighten the screws. When using a wrench to tighten the screws, ensure that the wrench does not tilt and the torque error does not exceed 10% of the specified value.
- Ensure that bolts are tightened with a torque tool and marked in red and blue after double-check. Installation personnel mark tightened bolts in blue. Quality inspection personnel confirm that the bolts are tightened and then mark them in red. (The marks must cross the edges of the bolts.)



- If the equipment has multiple inputs, disconnect all the inputs before operating the equipment.
- Before maintaining a downstream electrical or power distribution device, turn off the output switch on the power supply equipment.

- During equipment maintenance, attach "Do not switch on" labels near the upstream and downstream switches or circuit breakers as well as warning signs to prevent accidental connection. The equipment can be powered on only after troubleshooting is complete.
- Do not open equipment panels.
- Check equipment connections periodically, ensuring that all screws are securely tightened.
- Only qualified professionals can replace a damaged cable.
- Do not scrawl, damage, or block any labels or nameplates on the equipment. Promptly replace labels that have worn out.
- Do not use solvents such as water, alcohol, or oil to clean electrical components inside or outside of the equipment.

Grounding

- Ensure that the grounding impedance of the equipment complies with local electrical standards.
- Ensure that the equipment is connected permanently to the protective ground. Before operating the equipment, check its electrical connection to ensure that it is reliably grounded.
- Do not work on the equipment in the absence of a properly installed ground conductor.
- Do not damage the ground conductor.

Cabling Requirements

- When selecting, installing, and routing cables, follow local safety regulations and rules.
- When routing power cables, ensure that there is no coiling or twisting. Do not join or weld power cables. If necessary, use a longer cable.
- Ensure that all cables are properly connected and insulated, and meet specifications.
- Ensure that the slots and holes for routing cables are free from sharp edges, and that the positions where cables are routed through pipes or cable holes are equipped with cushion materials to prevent the cables from being damaged by sharp edges or burrs.
- Ensure that cables of the same type are bound together neatly and straight and that the cable sheath is intact. When routing cables of different types, ensure that they are away from each other without entanglement and overlapping.
- Secure buried cables using cable supports and cable clips. Ensure that the cables in the backfill area are in close contact with the ground to prevent cable deformation or damage during backfilling.
- If the external conditions (such as the cable layout or ambient temperature) change, verify the cable usage in accordance with the IEC-60364-5-52 or local laws and regulations. For example, check that the current-carrying capacity meets requirements.
- When routing cables, reserve at least 30 mm clearance between the cables and heat-generating components or areas. This prevents deterioration or damage to the cable insulation layer.

1.3 Environment Requirements

1 DANGER

Do not expose the equipment to flammable or explosive gas or smoke. Do not perform any operation on the equipment in such environments.

1 DANGER

Do not store any flammable or explosive materials in the equipment area.

Do not place the equipment near heat sources or fire sources, such as smoke, candles, heaters, or other heating devices. Overheat may damage the equipment or cause a fire.

Install the equipment in an area far away from liquids. Do not install it under areas prone to condensation, such as under water pipes and air exhaust vents, or areas prone to water leakage, such as air conditioner vents, ventilation vents, or feeder windows of the equipment room. Ensure that no liquid enters the equipment to prevent faults or short circuits.

To prevent damage or fire due to high temperature, ensure that the ventilation vents or heat dissipation systems are not obstructed or covered by other objects while the equipment is running.

General Requirements

- Store the equipment according to the storage requirements. Equipment damage caused by unqualified storage conditions is not covered under the warranty.
- Keep the installation and operating environments of the equipment within the allowed ranges. Otherwise, its performance and safety will be compromised.
- The operating temperature range provided in the equipment's technical specifications refers to the ambient temperatures in equipment's installation environment.

- Do not install, use, or operate outdoor equipment and cables (including but not limited to moving equipment, operating equipment and cables, inserting connectors to or removing connectors from signal ports connected to outdoor facilities, working at heights, performing outdoor installation, and opening doors) in harsh weather conditions such as lightning, rain, snow, and level 6 or stronger wind.
- Do not install the equipment in an environment with dust, smoke, volatile or corrosive gases, infrared and other radiations, organic solvents, or salty air.
- Do not install the equipment in an environment with conductive metal or magnetic dust.
- Do not install the equipment in an area conducive to the growth of microorganisms such as fungus or mildew.
- Do not install the equipment in an area with strong vibration, noise, or electromagnetic interference.
- Ensure that the site complies with local laws, regulations, and related standards.
- Ensure that the ground in the installation environment is solid, free from spongy or soft soil, and not prone to subsidence. The site must not be located in a low-lying land prone to water or snow accumulation, and the horizontal level of the site must be above the highest water level of that area in history.
- Do not install the equipment in a position that may be submerged in water.
- If the equipment is installed in a place with abundant vegetation, in addition to routine weeding, harden the ground underneath the equipment using cement or gravel (the area shall be greater than or equal to 3 m x 2.5 m).
- Do not install the equipment outdoors in salt-affected areas because it may be corroded. A salt-affected area refers to the region within 500 m of the coast or prone to sea breeze. Regions prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills).
- Before installation, operation, and maintenance, clean up any water, ice, snow, or other foreign objects on the top of the equipment.
- When installing the equipment, ensure that the installation surface is solid enough to bear the weight of the equipment.
- After installing the equipment, remove the packing materials such as cartons, foam, plastics, and cable ties from the equipment area.

1.4 Mechanical Safety

Ensure that all necessary tools are ready and inspected by a professional organization. Do not use tools that have signs of scratches or fail to pass the inspection or whose inspection validity period has expired. Ensure that the tools are secure and not overloaded.


Do not drill holes into the equipment. Doing so may affect the sealing performance and electromagnetic containment of the equipment and damage components or cables inside. Metal shavings from drilling may short-circuit boards inside the equipment.

General Requirements

- Repaint any paint scratches caused during equipment transportation or installation in a timely manner. Equipment with scratches must not be exposed for an extended period of time.
- Do not perform operations such as arc welding and cutting on the equipment without evaluation by the Company.
- Do not install other devices on the top of the equipment without evaluation by the Company.
- When performing operations over the top of the equipment, take measures to protect the equipment against damage.
- Use correct tools and operate them in the correct way.

Moving Heavy Objects

• Be cautious to prevent injury when moving heavy objects.

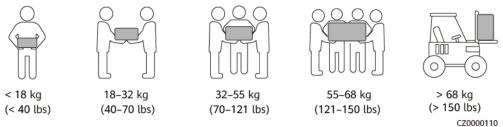

- If multiple persons need to move a heavy object together, determine the manpower and work division with consideration of height and other conditions to ensure that the weight is equally distributed.
- If two persons or more move a heavy object together, ensure that the object is lifted and landed simultaneously and moved at a uniform pace under the supervision of one person.
- Wear personal protective gears such as protective gloves and shoes when manually moving the equipment.
- To move an object by hand, approach to the object, squat down, and then lift the object gently and stably by the force of the legs instead of your back. Do not lift it suddenly or turn your body around.
- Do not quickly lift a heavy object above your waist. Place the object on a workbench that is half-waist high or any other appropriate place, adjust the positions of your palms, and then lift it.
- Move a heavy object stably with balanced force at an even and low speed. Put down the object stably and slowly to prevent any collision or drop from scratching the surface of the equipment or damaging the components and cables.

- When moving a heavy object, be aware of the workbench, slope, staircase, and slippery places. When moving a heavy object through a door, ensure that the door is wide enough to move the object and avoid bumping or injury.
- When transferring a heavy object, move your feet instead of turning your waist around. When lifting and transferring a heavy object, ensure that your feet point to the target direction of movement.
- When transporting the equipment using a pallet truck or forklift, ensure that the tynes are properly positioned so that the equipment does not topple. Before moving the equipment, secure it to the pallet truck or forklift using ropes. When moving the equipment, assign dedicated personnel to take care of it.
- Choose sea, roads in good conditions, or airplanes for transportation. Do not transport the equipment by railway. Avoid tilt or jolt during transportation.


Using Ladders

- Use wooden or insulated ladders when you need to perform live-line working at heights.
- Platform ladders with protective rails are preferred. Single ladders are not recommended.
- Before using a ladder, check that it is intact and confirm its load bearing capacity. Do not overload it.
- Ensure that the ladder is securely positioned and held firm.






- When climbing up the ladder, keep your body stable and your center of gravity between the side rails, and do not overreach to the sides.
- When a step ladder is used, ensure that the pull ropes are secured.
- If a single ladder is used, the recommended angle for the ladder against the floor is 75 degrees, as shown in the following figure. A square can be used to measure the angle.

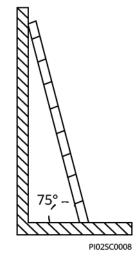


- If a single ladder is used, ensure that the wider end of the ladder is at the bottom, and take protective measures to prevent the ladder from sliding.
- If a single ladder is used, do not climb higher than the fourth rung of the ladder from the top.
- If you use a single ladder to climb up to a platform, ensure that the ladder is at least 1 m higher than the platform.

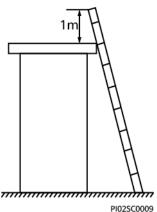

Hoisting

- Only trained and qualified personnel are allowed to perform hoisting operations.
- Install temporary warning signs or fences to isolate the hoisting area.
- Ensure that the foundation where hoisting is performed on meets the loadbearing requirements.
- Before hoisting objects, ensure that hoisting tools are firmly secured onto a fixed object or wall that meets the load-bearing requirements.
- During hoisting, do not stand or walk under the crane or the hoisted objects.
- Do not drag steel ropes and hoisting tools or bump the hoisted objects against hard objects during hoisting.
- Ensure that the angle between two hoisting ropes is no more than 90 degrees, as shown in the following figure.

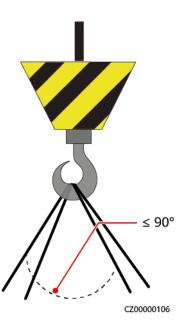

Drilling Holes

- Obtain consent from the customer and contractor before drilling holes.
- Wear protective equipment such as safety goggles and protective gloves when drilling holes.
- To avoid short circuits or other risks, do not drill holes into buried pipes or cables.
- When drilling holes, protect the equipment from shavings. After drilling, clean up any shavings.

2 Product Introduction

2.1 Overview

Function

The SUN2000-(2KTL-6KTL)-L1 is a single-phase grid-tied string inverter that converts the DC power generated by PV strings into AC power and feeds the electricity into the power grid.

Model

This document involves the following product models:

- SUN2000-2KTL-L1
- SUN2000-3KTL-L1
- SUN2000-3.68KTL-L1
- SUN2000-4KTL-L1
- SUN2000-4.6KTL-L1
- SUN2000-5KTL-L1
- SUN2000-6KTL-L1

Figure 2-1 Model identifier (using SUN2000-5KTL-L1 as an example)




 Table 2-1 Identifier description


No.	Meaning	Value
1	Product family name	SUN2000: grid-tied solar inverter

No.	Meaning	Value	
2	Power level	• 2K: The power level is 2 kW.	
		• 3K: The power level is 3 kW.	
		• 3.68K: The power level is 3.68 kW.	
		• 4K: The power level is 4 kW.	
		• 4.6K: The power level is 4.6 kW.	
		• 5K: The power level is 5 kW.	
		• 6K: The power level is 6 kW.	
3	Тороlоду	TL: transformerless	
4	Design code	L1: residential	

Networking Application

The inverter applies to residential rooftop grid-tied systems. The system consists of PV strings, grid-tied solar inverters, AC switches, and power distribution units (PDUs).

Figure 2-2 Single inverter scenario (dashed boxes indicate optional configuration)

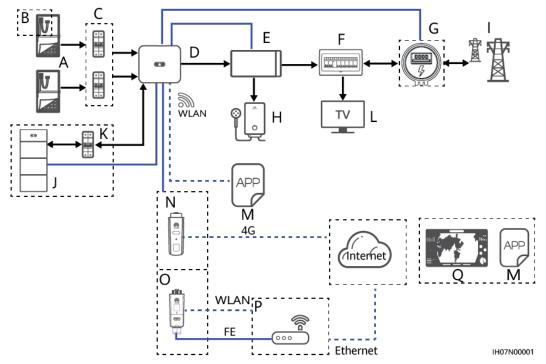

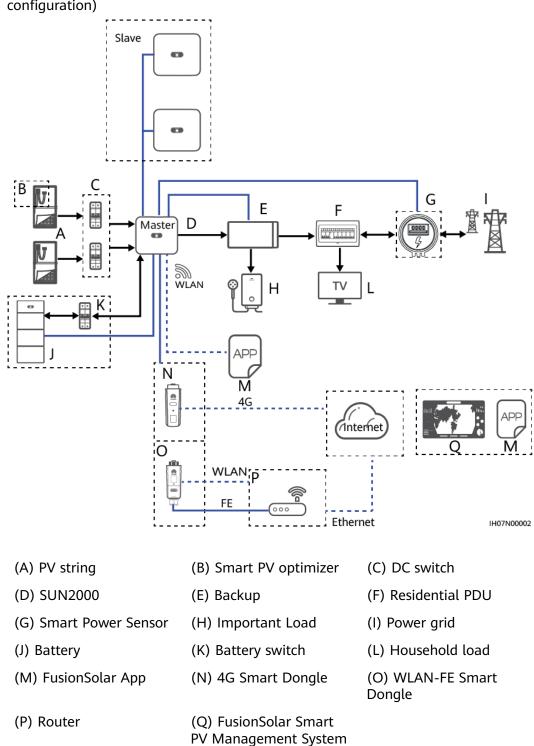


Figure 2-3 Inverter cascading scenario (dashed boxes indicate optional configuration)

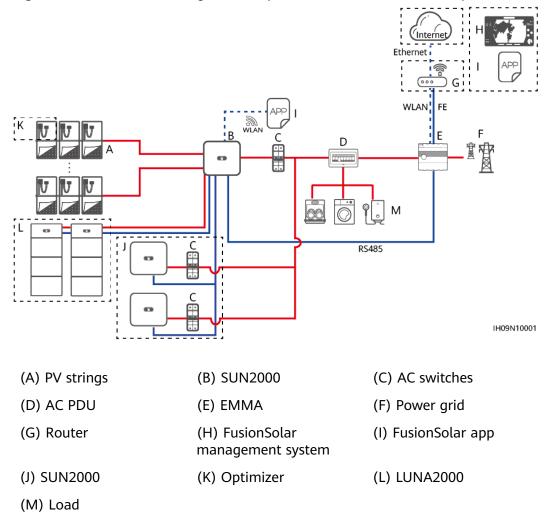


Figure 2-4 EMMA networking (the components in dashed boxes are optional)

D NOTE

- indicates the power flow direction, indicates the signal line, and indicates the wireless communication.
- The SUN2000-(2KTL-6KTL)-L1 can connect to only one LUNA2000-(7, 14, 21)-S1 ESS in the Smart Dongle networking or inverter WLAN direct connection scenario, and can connect to a maximum of two LUNA2000-(7, 14, 21)-S1 ESSs in the EMMA networking scenario. When the inverter is connected to two ESSs, the FE network cable between the ESSs must be connected, and an ESS needs to be connected to the EMMA or router through an FE network cable.
- In the inverter cascading scenario, only one smart power sensor (G in the figure) can be connected to the master inverter.
- In the inverter cascading scenario, the inverters connected to the power grid must meet the local power grid requirements.
- For details about the Smart Dongle networking, see the **Residential Smart PV Solution** Quick Guide (Single-Phase PV+ESS Scenario + Smart Dongle Networking) or Residential Smart PV Solution User Manual (Smart Dongle Networking and Inverter Direct Connection).
- For details about the EMMA networking, see the Residential Smart PV Solution Quick Guide (Single-Phase PV+ESS Scenario + EMMA Networking) or Residential Smart PV Solution User Manual (EMMA Networking and SmartGuard Networking).
- For details about the SmartGuard networking, see the **Residential Smart PV Solution Quick Guide (Single-Phase PV+ESS Scenario + SmartGuard Networking)** or **Residential Smart PV Solution User Manual (EMMA Networking and SmartGuard Networking)**.

D NOTE


For detailed operations on devices in the network, see the following guides:


- SUN2000-450W-P Smart PV Optimizer Quick Guide
- SUN2000- (600W-P, 450W-P2) Smart PV Optimizer Quick Guide
- SUN2000 Smart PV Optimizer User Manual
- LUNA2000-(5-30)-S0 User Manual
- Backup Box-(B0, B1) Quick Guide

- The off-grid load output port of the Backup Box cannot be directly connected to the power grid. Otherwise, the Backup Box will be shut down due to overload.
- Off-grid electric motor loads are not supported. The startup power of an electric motor is several times of its rated power, which may exceed the load capacity of the inverter, resulting in startup failure.

Supported Power Grid Types


The inverter supports the following power grid types: TN-S, TN-C, TN-C-S, and TT. In the TT power grid, the N-to-PE voltage must be less than 30 V.



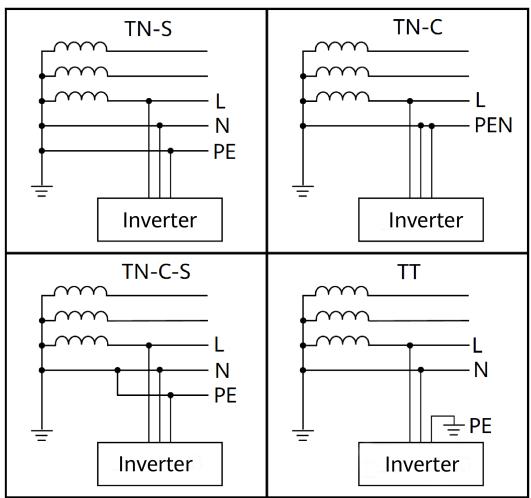

2.2 Component Description

Appearance

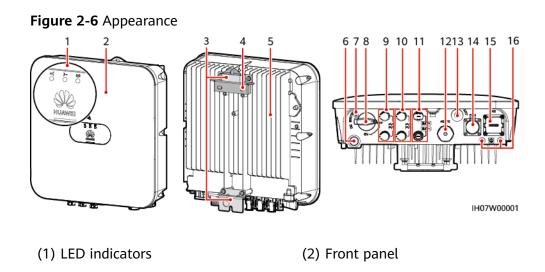

- (3) Hanging kit
- (5) Heat sink
- (7) DC switch locking screw hole^a
- (9) DC input terminals (PV1+/PV1-)
- (11) Battery terminals (BAT+/BAT-)
- (13) Antenna port (ANT)
- (15) AC output port (AC)

- (4) Mounting bracket
- (6) Ventilation valve
- (8) DC switch^b (DC SWITCH)
- (10) DC input terminals (PV2+/PV2-)
- (12) Smart Dongle port (4G/FE)
- (14) Communications port (COM)
- (16) Ground point

NOTE

- Note a: The DC switch locking screw is used to lock the DC switch to prevent accidental startup. It is delivered with the inverter.
- Note b: DC input terminals PV1 and PV2 are controlled by the DC switch.

2.3 Label Description

Enclosure Labels

lcon	Name	Meaning
Warning: High Temperaturel 高温危险! Never touch the enclosure of an operating SUN2000. 逆变器工作时严禁触摸外壳。	Burn warning	Do not touch a running inverter because the enclosure is hot when the inverter is running.
Danger: High Voltagel 高压危险! Start maintaining the SUN2000 at least 5 minutes after the SUN2000 disconnects from all external power supplies. 逆変器与外部所有电源断开后 需要等待至少5分钟,才可以 进行维护。	Delayed discharge	• High voltage exists after the inverter is powered on. Only qualified and trained electrical technicians are allowed to perform operations on the inverter.
		 Residual voltage exists after the inverter is powered off. It takes 5 minutes for the inverter to discharge to the safe voltage.

Table 2-2 Enclosure label description

lcon	Name	Meaning
CAUTION Read instructions carefully before performing any operation on the SUN2000. 对逆变器进行任何操作前,请 仔细阅读说明书!	Refer to documentation	Reminds operators to refer to the documents delivered the inverter.
	Grounding	Indicates the position for connecting the protective earthing (PE) cable.
Do not disconnect under load ! 禁止带负荷断开连接!	Operation warning	Do not remove the connector or antenna when the inverter is running.
Konstantial before connecting supply. 大接触电流:接通电源前须先接地。	Grounding warning	Ground the inverter before powering it on.
(1P)PN/ITEM:XXXXXXX Y (32P)Model: XXXXXXXX (S)SN:XXXXXXXXXX MADE IN CHINA	Serial number (SN)	Indicates the inverter SN.
MAC: xxxxxxxxxx	Media access control (MAC) address	Indicates the MAC address.
	QR code for logging in to the inverter WLAN	Scan the QR code to connect to the Huawei inverter WLAN (Android) or obtain the WLAN login password (iOS).

The labels are for reference only.

Nameplate

型号 Model: SUN2000-5KTL-L1 \mathcal{D} 1 名称 Name:太阳能光伏逆变器 SOLAR INVERTER HUAWEI 最大输入电压 d.c. Max. Input Voltage: 600 V MPPT电压范围 d.c. MPPT Range: 90 - 560 V 2 最大输入电流 d.c. Max. Input Current: 12.5 A/12.5 A 输入短路电流 Isc PV: 18 A/18 A 电池 Battery: 600 VDC Max; 15 A Max 输出电压 a.c. Output Nominal Voltage: 220/230/240 V 输出频率 a.c. Nominal Operating Frequency: 50/60 Hz 额定输出功率 a.c. Output Rated Power: 5 kVA 最大输出功率 a.c. Output Max. Power: 5.5 kVA 最大输出电流 a.c. Output Max. Current: 25 A 功率因数 Power Factor: 0.8(lagging) = 0.8(leading) 温度范围 Operating Temperature Range: - 25 = +60 ℃ 逆变器拓扑 Inverter Topology: Non-Isolation 防护等级 Enclosure: IP65 保护等级 Protection Class: I 3 CE 🔊 华为技术有限公司 HUAWEI TECHNOLOGIES CO., LTD. HQ of Huawei, Bantian, Longgang Distr 518129, P.R.C MADE IN C 4 (1) Trademark and model (2) Key technical specifications (3) Compliance symbols (4) Company name and country of origin

Figure 2-7 Nameplate (using SUN2000-5KTL-L1 as an example)

NOTE


The nameplate figure is for reference only.


2.4 Working Principles

Schematic Diagram

The inverter receives inputs from up to two PV strings. Then the inputs are grouped into two MPPT routes inside the inverter to track the maximum power point of the PV strings. The DC power is then converted into single-phase AC power through an inverter circuit. Surge protection is supported on both the DC and AC sides.

The inverter uses a reserved battery port for energy storage expansion. Battery performs charging and discharging operations according to the battery working mode.



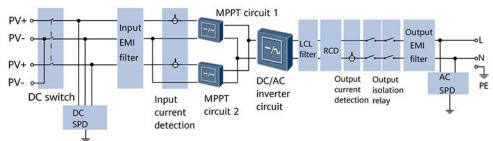

Working Mode

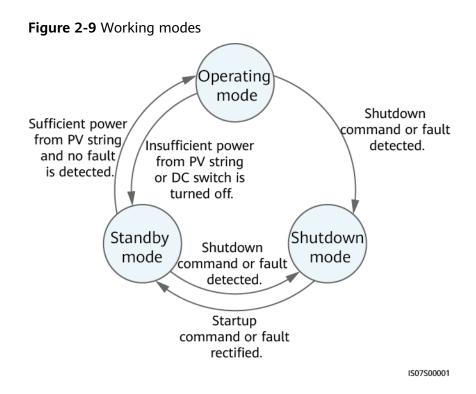


 Table 2-3 Working mode description

Working mode	Description
Standby mode	The inverter enters Standby mode when the external environment does not meet the requirements for starting the inverter. In Standby mode:
	• The inverter continuously detects its operation status. Once the operating conditions are met, the inverter enters Operating mode.
	• If the inverter detects a shutdown command or a fault after startup, it enters Shutdown mode.

Working mode	Description
Operating mode	 In Operating mode: The inverter converts DC power from PV strings into AC power and feeds the power to the power grid. The inverter tracks the maximum power point to maximize the PV string output power. If the inverter detects a shutdown command or a fault, it enters Shutdown mode. If the inverter detects that the output power of PV strings does not meet the requirements for grid-tied power generation, it enters Standby mode.
Shutdown mode	 In Standby or Operating mode, if the inverter detects a shutdown command or a fault, it enters Shutdown mode. In Shutdown mode, if the inverter detects that the fault is rectified or the startup command is executed, the inverter enters Standby mode.

3 Storage Requirements

The following requirements should be met if the inverter is not put into use directly:

- Do not unpack the inverter.
- Keep the storage temperature at -40°C to +70°C and the humidity at 5%-95% RH.
- The product should be stored in a clean and dry place and be protected from dust and water vapor corrosion.
- A maximum of eight inverters can be stacked. To avoid personal injury or device damage, stack inverters with caution to prevent them from falling over.
- During the storage period, check the inverter periodically. (It is recommended that the check is performed every three months.) Replace the packing materials that are damaged by insects or rodents in a timely manner.
- If the inverter has been stored for more than two years, it must be checked and tested by professionals before being put into use.

4 System Installation

4.1 Checking Before Installation

Outer Packing Materials

Before unpacking the inverter, check the outer packing materials for damage, such as holes and cracks, and check the inverter model. If any damage is found or the inverter model is not what you requested, do not unpack the package and contact your supplier as soon as possible.

NOTE

You are advised to remove the packing materials within 24 hours before installing the inverter.

Package Contents

NOTICE

• After placing the equipment in the installation position, unpack it with care to prevent scratches. Keep the equipment stable during unpacking.

After unpacking the inverter, check that the contents are intact and complete. If any damage is found or any component is missing, contact your supplier.

NOTE

For details about the number of contents, see the *Packing List* in the packing case.

4.2 Preparing Tools and Instruments

Туре	Tools and Instruments		
Installation	Hammer drill (with a	Torque socket wrench	Sector Torque wrench
	drill bit of 8 mm)		
	Diagonal pliers	Wire strippers	Torque screwdriver
	Rubber mallet	Utility knife	Cable cutter
			<u>z</u>
	Crimping tool (model: PV- CZM-22100/19100)	Cord end terminal crimper	Disassembly and Assembly Tool (model: PV-MS-HZ open-end wrench)
	Cable tie	Vacuum cleaner	Multimeter (DC voltage measurement range ≥ 600 V DC)

Туре	Tools and Instruments		
	₫		<u>6</u>
	Marker	Steel measuring tape	Level
	Hydraulic pliers	Heat-shrink tubing	Heat gun
Personal protective equipment (PPE)		and and	Dust mask
	Insulated gloves	Protective gloves	
	Certific Contraction of the second se		-
	Safety boots	Safety goggles	

4.3 Determining the Installation Position

Basic Requirements

- The inverter is protected to IP65 and can be installed indoors or outdoors.
- Do not install the inverter in a place where personnel are easy to come into contact with its enclosure and heat sink, because these parts are extremely hot during operation.
- Do not install the inverter near flammable or explosive materials.
- Do not install the inverter at a place within children's reach.
- The inverter will be corroded in salt areas, and the salt corrosion may cause fire. Do not install the inverter outdoors in salt areas. A salt area refers to the region within 500 meters from the coast or prone to sea breeze. The regions

prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills).

Installation Environment Requirements

- The inverter must be installed in a well-ventilated environment to ensure good heat dissipation.
- When the inverter is installed under direct sunlight, the power may be derated due to the temperature rise.
- You are advised to install the inverter in a sheltered place or install an awning over it.

Mounting Structure Requirements


- The mounting structure where the inverter is installed must be fire resistant.
- Do not install the inverter on flammable building materials.
- Ensure that the installation surface is solid enough to bear the weight of the inverter.
- In residential areas, do not install the inverter on plaster board walls or walls made of similar materials with a weak sound insulation performance because the noise generated by the inverter may interfere with residents.

Installation Angle Requirements

The inverter can be wall-mounted or pole-mounted. The installation angle requirements are as follows:

- Install the inverter vertically or at a maximum back tilt of 15 degrees to facilitate heat dissipation.
- Do not install the inverter at forward tilted, excessive back tilted, side tilted, horizontal, or upside down positions.




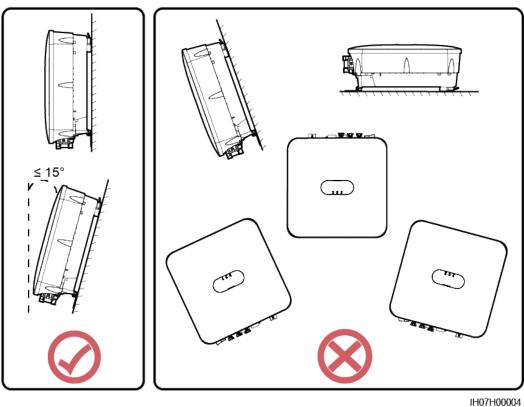

Installation Space Requirements

• Reserve enough clearance around the inverter to ensure sufficient space for installation and heat dissipation.

Figure 4-2 Installation space

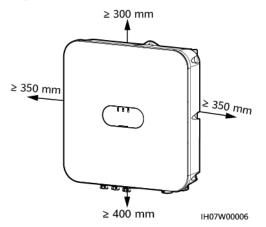

• When installing multiple inverters, install them in horizontal mode if sufficient space is available and install them in triangle mode if no sufficient space is available. Stacked installation is not recommended.


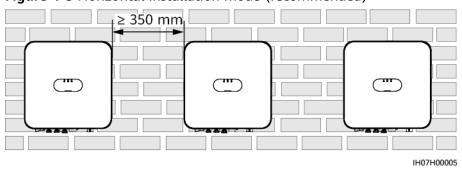


Figure 4-3 Horizontal installation mode (recommended)

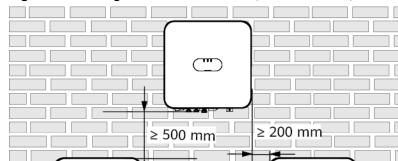


m

IH07H00006

Figure 4-4 Triangle installation mode (recommended)



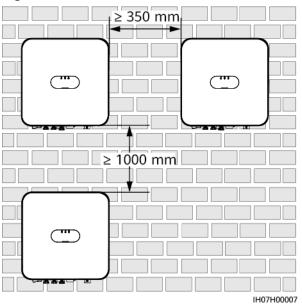

m


The installation figures are for reference only and are irrelevant to the inverter cascading scenario.

4.4 Moving a Inverter

Procedure

Step 1 Hold the handles on both sides of the inverter, lift the inverter from the packing case, and transport it to the installation position.

- Move the inverter with care to prevent device damage and personal injury.
- Do not use the wiring terminals and ports at the bottom to support any weight of the inverter.
- When you need to temporally place the inverter on the ground, use foam, paper, or other protection material to prevent damage to its enclosure.

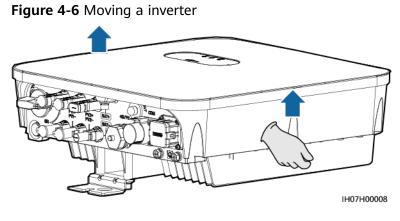

----End

4.5 Installing a Inverter

Installation Precautions

Figure 4-7 shows the dimensions of mounting holes for the Inverter.

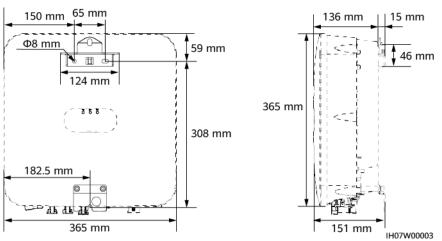


Figure 4-7 Mounting bracket dimensions

4.5.1 Wall-Mounted Installation

Procedure

- **Step 1** Determine the positions for drilling holes using the marking-off template. Level the positions of mounting holes using a level, and mark the positions with a marker.
- **Step 2** Secure the mounting bracket.


▲ DANGER

When drilling holes, avoid the water pipes and power cables buried in the wall.

NOTE

- M6x60 expansion bolts are delivered with the inverter. If the length and amount of the bolts do not meet installation requirements, prepare M6 stainless steel expansion bolts by yourself.
- The expansion bolts delivered with the inverter are used for solid concrete walls. For other types of walls, prepare bolts by yourself and ensure that the wall meets the load bearing requirements of the inverter.

Figure 4-8 Expansion bolt composition

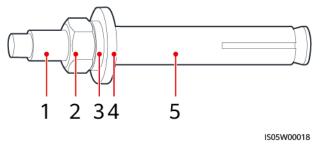


(1) Bolt (2) Nut (3) S

(3) Spring washer

(4) Flat washer (5) Expansion sleeve

NOTICE

- To prevent dust inhalation or contact with eyes, wear safety goggles and a dust mask when drilling holes.
- Wipe away any dust in or around the holes and measure the hole distances. If the holes are inaccurately positioned, drill holes again.
- Level the head of the expansion sleeve with the concrete wall after removing the nut, spring washer, and flat washer. Otherwise, the mounting bracket will not be securely installed on the wall.
- Loosen the nut, spring washer, and flat washer of the expansion bolt at the bottom.

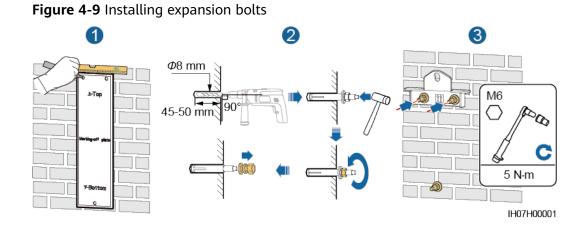

Step 3 (Optional) Install the locking screw for the DC switch.


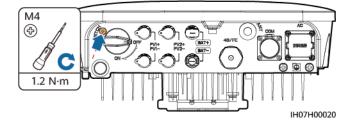


Figure 4-10 Installing a locking screw for the DC switch

- **Step 4** Install the inverter on the mounting bracket.
- **Step 5** Tighten the nuts.

Figure 4-11 Tightening nuts

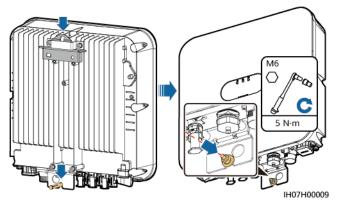


Step 6 (Optional) Install an anti-theft lock.

NOTICE

- Prepare an anti-theft lock suitable for the lock hole diameter (Φ10 mm).
- An outdoor waterproof lock is recommended.
- Keep the key to the anti-theft lock.

Figure 4-12 Installing an anti-theft lock

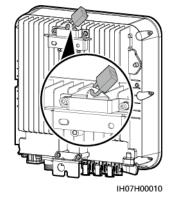


----End

4.5.2 Support-Mounted Installation

Procedure

Step 1 Determine the positions for drilling holes using the marking-off template, and then mark the positions with a marker.

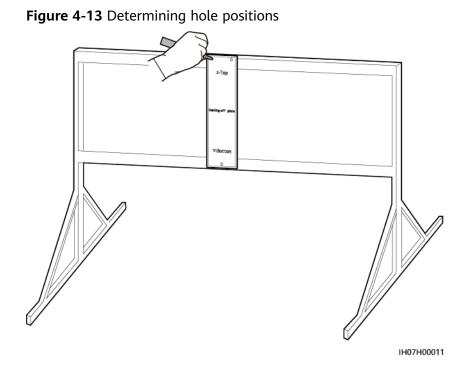



Step 2 Drill holes using a hammer drill.

NOTE

You are advised to apply anti-rust paint on the hole positions for protection.

Figure 4-14 Drilling holes

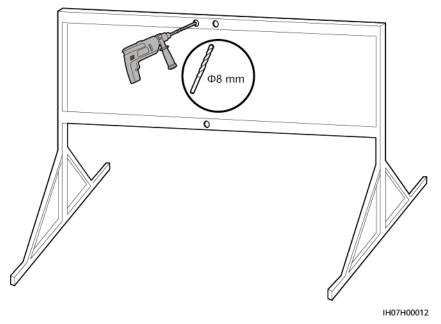



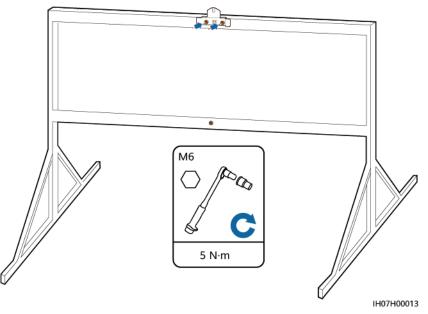


Figure 4-15 Secure the mounting bracket

NOTE

Prepare bolt assemblies based on the hole diameter of the mounting bracket.

Step 4 (Optional) Install the locking screw for the DC switch.



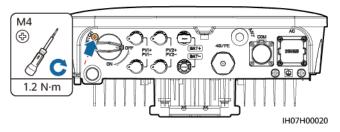


Figure 4-16 Installing a locking screw for the DC switch

Step 5 Install the inverter on the mounting bracket.

Step 6 Tighten the bolt assemblies.



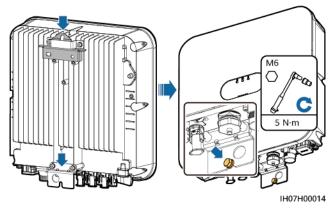


Step 7 (Optional) Install an anti-theft lock.

NOTICE

- Prepare an anti-theft lock suitable for the lock hole diameter (Φ10 mm).
- An outdoor waterproof lock is recommended.
- Keep the key to the anti-theft lock.

Figure 4-18 Installing an anti-theft lock

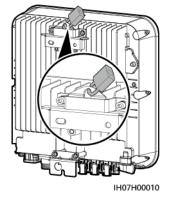

----End

5 Electrical Connection

5.1 Precautions

▲ DANGER

When exposed to sunlight, the PV arrays supply DC voltage to the inverter. Before connecting cables, ensure that all **DC SWITCH** on the inverter are OFF. Otherwise, the high voltage of the inverter may result in electric shocks.

▲ DANGER

- The site must be equipped with qualified fire fighting facilities, such as fire sand and carbon dioxide fire extinguishers.
- Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.

- The equipment damage caused by incorrect cable connections is beyond the warranty scope.
- Only certified electrician can perform electrical terminations.
- Operation personnel must wear PPE when connecting cables.
- Before connecting cables to ports, leave enough slack to reduce the tension on the cables and prevent poor cable connections.

• Stay away from the equipment when preparing cables to prevent cable scraps from entering the equipment. Cable scraps may cause sparks and result in personal injury and equipment damage.

NOTE

The cable colors shown in the electrical connection diagrams provided in this section are for reference only. Select cables in accordance with local cable specifications (green-and-yellow cables are only used for protective earthing).

5.2 Preparing Cables

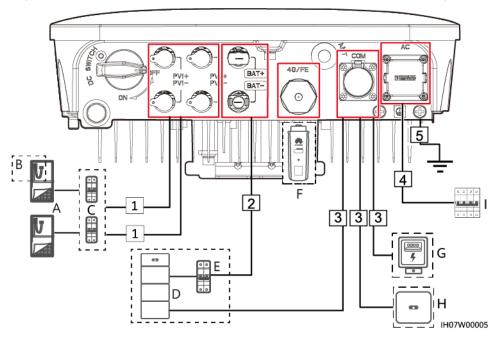


Figure 5-1 Cable connections (dashed boxes indicate optional configuration)

Table 5-1 Component description

No.	Component	Description	Source
A	PV string	 A PV string is composed of the PV modules connected in series and works with an optimizer. 	Prepared by the customer
		• The inverter supports the input from two PV strings.	

No.	Component	Description	Source
В	Smart PV optimizer	The supported Smart PV Optimizer models are SUN2000-450W-P, SUN2000-450W-P2, and SUN2000-600W-P.	Purchased from Huawei
С	DC switch	Recommended: a DC circuit breaker with a rated voltage greater than or equal to 600 V DC and a rated current of 20 A	Prepared by the customer
D	Battery	The inverter can connect to LUNA2000 batteries.	Purchased from Huawei
		The inverter can connect to LG-RESU batteries (LG RESU7H and RESU10H).	Prepared by the customer
E	Battery switch	Recommended: a DC circuit breaker with a rated voltage greater than or equal to 600 V DC and a rated current of 20 A	Prepared by the customer
F	Smart Dongle ^a	 Supported models: WLAN-FE Smart Dongle: SDongleA-05 4G Smart Dongle: SDongleA-03, SDongleB-06 	Purchased from Huawei
G	Smart Power Sensor ^b	The inverter can connect to the DTSU666-HW ^c , YDS60-80 ^d , YDS70-C16 ^e , DDSU666-H, DTSU666-H, DDSU71, DDSU1079-CT, DTSU71 and DHSU1079- CT ^f smart power sensors.	Purchased from Huawei
Н	SUN2000	Select a proper model as required.	Purchased from Huawei

No.	Component	Description	Source
1	AC switch	To ensure that the inverter can be safely disconnected from the power grid when an exception occurs, connect an AC switch to the AC side of the inverter. Select an appropriate AC switch in accordance with local industry standards and regulations. Huawei recommends the following switch specifications:	Prepared by the customer
		Recommended: a single- phase AC circuit breaker with a rated voltage greater than or equal to 250 V AC and a rated current of: • 16 A (SUN2000-2KTL- L1)	
		 25 A (SUN2000-3KTL- L1 and SUN2000-3.68KTL-L1) 	
		 32 A (SUN2000-4KTL- L1, SUN2000-4.6KTL- L1, SUN2000-5KTL-L1, and SUN2000-6KTL- L1) 	

No.	Component	Description	Source		
the WLA (WL	 Note a: For details about how to use the 4G Smart Dongle SDongleA-03, see the <i>SDongleA-03 Quick Guide (4G)</i>. For details about how to use the WLAN-FE Smart Dongle SDongleA-05, see the <i>SDongleA-05 Quick Guide</i> <i>(WLAN-FE)</i>. You can obtain these documents at https:// support.huawei.com/enterprise by searching for models. 				
sens DTS 250	 Note b: The Spanish version can use only the DDSU666-H smart power sensor provided by Huawei. For details about meter operations, see DTSU666-HW Smart Power Sensor Quick Guide, DTSU666-H 100 A and 250 A Smart Power Sensor User Manual, DDSU666-H Smart Power Sensor User Manual, and YDS70-C16 Smart Power Sensor Quick Guide. 				
	 Note c: SUN2000L V200R001C00SPC121 and later versions can connect to DTSU666-HW power meters. 				
	 Note d: SUN2000L V200R001C00SPC124 and later versions can connect to YDS60-80 power meters. 				
	• Note e: SUN2000L V200R001C00SPC127 and later versions can connect to YDS70-C16 power meters.				
	 Note f: SUN2000L V200R001C00SPC137 and later versions can connect to DDSU71, DDSU1079-CT, DTSU71 and DHSU1079-CT power meters. 				

Table 5-2 Cable description

No.	Cable	Туре	Recommended Specifications	Source
1	DC input power cable	Common outdoor PV cable in the industry	 Conductor cross- sectional area: 4–6 mm² Cable outer diameter: 5.5–9 mm 	Prepared by the customer
2	(Optional) Battery cable	Common outdoor PV cable in the industry	 Conductor cross- sectional area: 4–6 mm² Cable outer diameter: 5.5–9 mm 	Prepared by the customer

No.	Cable	Туре	Recommended Specifications	Source
3	(Optional) Signal cable	Outdoor shielded twisted pair cable	 Conductor cross-sectional area: Combined crimping of cables on the port: 0.20–0.35 mm² Crimping the cables on the port without combining them: 0.20–1 mm² Cable outer diameter: 4-hole rubber plug: 4–8 mm 2-hole rubber plug: 8–11 mm 	Prepared by the customer
4	AC output power cable ^a	 Not using the PE equipotential point at the AC output port: two-core (L and N) outdoor copper cable Using the PE equipotential point at the AC output port: three-core (L, N, and PE) outdoor copper cable 	 Conductor cross- sectional area: 4–6 mm² Cable outer diameter: 10–21 mm 	Prepared by the customer
5	PE cable	Single-core outdoor copper cable and M6 OT terminal	4–10 mm ²	Prepared by the customer
	Note a: The minimum cross-sectional area of the cable should be selected based on the rated value of the AC fuse.			

NOTE

- The minimum cable diameter must comply with local cable standards.
- The factors that affect cable selection include the rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.

5.3 Connecting PE Cables

Precautions

1 DANGER

- Ensure that the PE cable is securely connected. Otherwise, electric shocks may occur.
- Do not connect the neutral wire to the enclosure as a PE cable. Otherwise, electric shocks may occur.

D NOTE

- The PE point at the AC output port is used only as a PE equipotential point, and cannot substitute for the PE point on the enclosure.
- It is recommended that silica gel or paint be used around the ground terminal after the PE cable is connected.

Additional Information

The inverter provides the grounding detection function. This function is used to check whether the inverter is properly grounded before the inverter starts, or check whether the ground cable is disconnected when the inverter is running. This function is only available under limited conditions. To ensure the safe operation of the inverter, properly ground the inverter according to the connection requirements of the ground cable. For some power grid types, if the output side of the inverter is connected to an isolation transformer, ensure that the inverter is properly grounded and set **Grounding Exception Detection** to **Disable** to enable the inverter to run properly. If you are not sure whether the inverter is connected to such a type of power grid, contact your dealer or Huawei technical support for confirmation.


- According to IEC 62109, to ensure the safe operation of the inverter in the case of ground cable damage or disconnection, properly connect the ground cable of the inverter and ensure that it meets at least one of the following requirements before the grounding detection function becomes invalid:
 - If the PE terminal is not connected to the AC connector, use a single-core outdoor copper cable with a conductor cross-sectional area of at least 10 mm² as the PE cable on the chassis.
 - Use cables with the same diameter as the AC output power cable and ground the PE terminal on the AC connector and the ground screws on the chassis.
- In some countries and regions, the inverter must have additional ground cables. Use cables with the same diameter as the AC output power cable and ground the PE terminal on the AC connector and the ground screws on the chassis.

Procedure

Step 1 Crimp an OT terminal.

NOTICE


- Avoid scratching the core wire when stripping a cable.
- The cavity formed after the conductor crimp strip of the OT terminal is crimped must wrap the core wires completely. The core wires must contact the OT terminal closely.
- Wrap the wire crimping area with heat shrink tubing or insulation tape. The heat shrink tubing is used as an example.
- When using a heat gun, protect the equipment from being scorched.

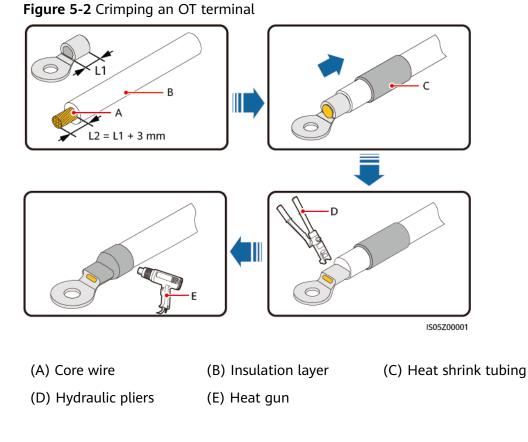


Step 2 Connect the PE cable.

NOTICE

- Ensure that the PE cable is connected securely.
- You are advised to use the right ground point and reserve the other ground point for future use.



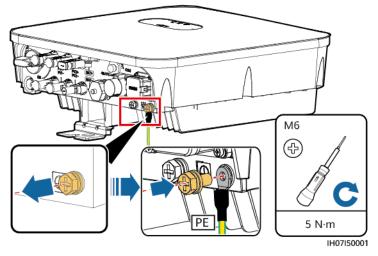

----End


5.4 (Optional) Installing a Smart Dongle

Procedure

NOTE

- You are advised to install the Smart Dongle before installing the WLAN antenna.
- If you prepared a Smart Dongle without a SIM card, you need to prepare a standard SIM card (size: 25 mm x 15 mm) with the capacity greater than or equal to 64 KB.
- When installing the SIM card, determine its installation direction based on the silk screen and arrow on the card slot.
- Press the SIM card in place to lock it, indicating that the SIM card is correctly installed.
- When removing the SIM card, push it inwards to eject it.
- When reinstalling the cover of the Smart Dongle, ensure that the buckles spring back in place with a click sound.
- 4G Smart Dongle (4G Communication)


Figure 5-4 Installing a 4G Smart Dongle

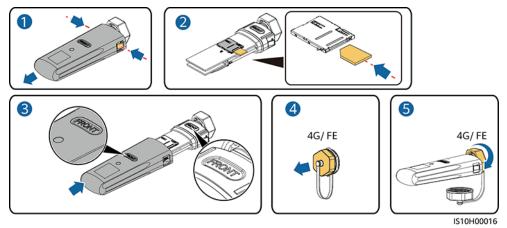

• WLAN-FE Smart Dongle (FE Communication)

You are advised to use a CAT 5E outdoor shielded network cable (outer diameter < 9 mm; internal resistance \leq 1.5 ohms/10 m) and shielded RJ45 connectors.

Figure 5-5 Installing a WLAN-FE Smart Dongle (FE communication)

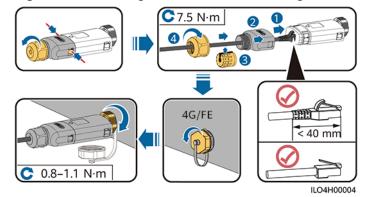

NOTE

There are two types of Smart Dongle:

 For details about how to use the WLAN-FE Smart Dongle SDongleA-05, see the SDongleA-05 Quick Guide (WLAN-FE). You can also scan the QR code to obtain the document.



• For details about how to use the 4G Smart Dongle SDongleA-03, see the *SDongleA-03 Quick Guide (4G)*. You can also scan the QR code to obtain the document.



The quick guide is delivered with the Smart Dongle.

5.5 Installing a WLAN Antenna

Procedure

- **Step 1** Remove the watertight cap from the ANT port.
- Step 2 Install the washer to the ANT port on the chassis.
- Step 3 Install the WLAN antenna.

NOTICE

Ensure that the WLAN antenna is installed securely.

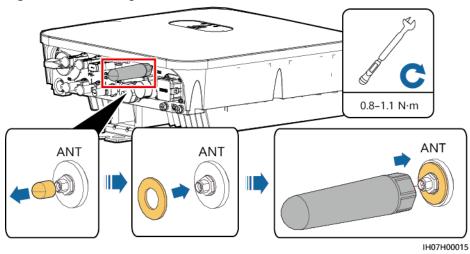


Figure 5-6 Installing a WLAN antenna

----End

5.6 Connecting an AC Output Power Cable

Precautions

An AC switch must be installed on the AC side of the inverter to ensure that the inverter can be safely disconnected from the power grid.

- Do not connect loads between an inverter and an AC switch that directly connects to the inverter. Otherwise, the switch may trip by mistake.
- If an AC switch is used with specifications beyond local standards, regulations, or the Company's recommendations, the switch may fail to turn off in a timely manner in case of exceptions, causing serious faults.

Each inverter shall be equipped with an AC output switch. Multiple inverters shall not connect to the same AC switch.

The inverter is integrated with a comprehensive residual current monitoring unit. Once detecting that the residual current exceeds the threshold, the inverter immediately disconnects itself from the power grid.

NOTICE

- If the external AC switch can perform earth leakage protection, the rated leakage action current should be greater than or equal to 100 mA.
- If multiple inverters connect to the general residual current device (RCD) through their respective external AC switches, the rated leakage action current of the general RCD should be greater than or equal to the number of inverters multiplied by 100 mA.
- A knife switch cannot be used as an AC switch.

Procedure

Step 1 Connect the AC output power cable to the AC connector.

NOTICE

- The PE point at the AC output port is used only as a PE equipotential point, and cannot substitute for the PE point on the enclosure.
- Keep the AC output power cable and the PE cable close to each other.
- Keep the AC output power cable and the DC input power cable close to each other.
- Ensure that the cable jacket is inside the connector.
- Ensure that the exposed core is totally inserted into the cable hole.
- Ensure that AC output cable is secured. Failing to do so may cause device malfunction or damage to its AC connector.
- Ensure that the cable is not twisted.

NOTICE

Strip the insulation layers of the AC output power cable by the recommended length (12–16 mm) to ensure that the cable conductors are completely inside the conductor insertion points and no insulation layer is pressed into the conductor insertion points. Otherwise, the device may fail to run properly or be damaged during operation.


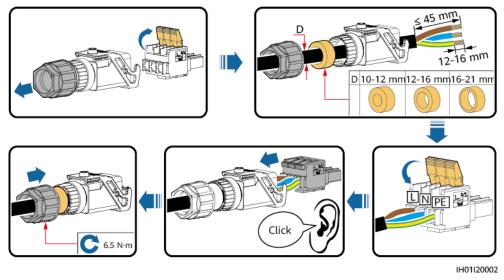


Figure 5-7 Assembling an AC connector (three-core wire)

Figure 5-8 Assembling an AC connector (two-core wire)

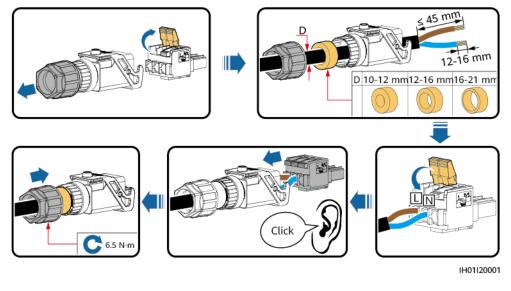

NOTE

- The cable colors shown in the figures are for reference only. Select an appropriate cable according to the local standards.
- For the core installation method and the length for cable stripping, see the instructions on the side of the plug insert.


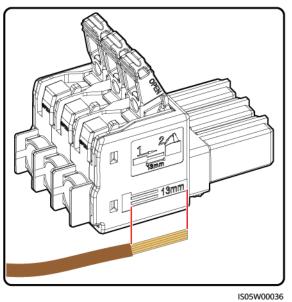



Figure 5-9 Length for cable stripping



NOTICE

Ensure that the AC connector is connected securely.

Figure 5-10 Securing an AC connector

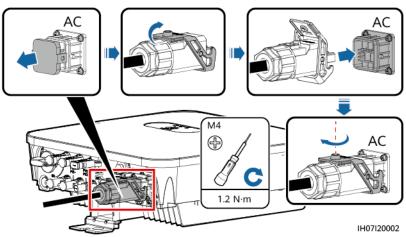

Step 3 Check the route of the AC output power cable.

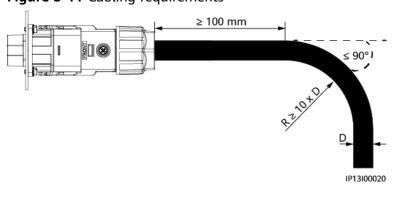


Figure 5-11 Cabling requirements

----End

Follow-up Procedure

Before removing the AC connector, ensure that the DC switch at the bottom of the inverter and all the switches connected to the inverter are OFF.

To remove the AC connector from the inverter, perform the operations in reverse order.

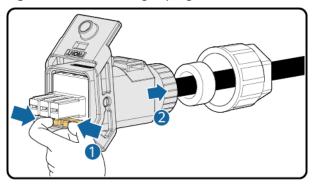


Figure 5-12 Removing a plug insert

IS05H00031

5.7 Connecting DC Input Power Cables

Precautions

- Before connecting the DC input power cables, ensure that the DC voltage is within the safe range (lower than 60 V DC) and that the DC switch on the inverter is OFF. Failing to do so may result in electric shocks.
- When the inverter is running, it is not allowed to work on the DC input power cables, such as connecting or disconnecting a PV string or a PV module in a PV string. Failing to do so may cause electric shocks.
- If no PV string connects to a DC input terminal of the inverter, do not remove the watertight cap from the DC input terminals. Otherwise, the IP rating of the inverter will be affected.

Ensure that the following conditions are met. Otherwise, the inverter may be damaged, or even a fire could happen.


- The DC input voltage of the inverter shall not exceed maximum input voltage under any circumstance.
- The polarities of electric connections are correct on the DC input side. The positive and negative terminals of a PV string connect to corresponding positive and negative DC input terminals of the inverter.
- If the DC input power cables are reversely connected, do not operate the DC switch as well as positive and negative connectors immediately. Wait until the night when solar irradiance declines and the PV string current drops to below 0.5 A. Then set the DC switch to the OFF position, remove the positive and negative connectors, and correct the polarities of the DC input power cables.

During the installation of PV strings and the inverter, the positive or negative terminals of PV strings may be short-circuited to ground if the power cables are not properly installed or routed. In this case, an AC or DC short circuit may occur and damage the inverter. The resulting device damage is not covered under any warranty.

NOTICE

Since the output of the PV string connected to the inverter cannot be grounded, ensure that the PV module output is well insulated to ground.

Terminal Description

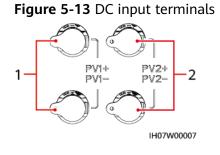

(1) Terminals of DC input 1

(2) Terminals of DC input 2

Procedure


Step 1 Assemble a DC connector.

Use the Staubli MC4 positive and negative metal terminals and DC connectors delivered with the inverter. Using incompatible positive and negative metal terminals and DC connectors may result in serious consequences. The caused device damage is not covered under any warranty or service agreement.

NOTICE

- Keep the DC input PV+ cable and PV- cable close to each other.
- Cables with high rigidity, such as armored cables, are not recommended as DC input power cables, because poor contact may be caused by the bending of the cables.
- Before assembling DC connectors, label the cable polarities correctly to ensure correct cable connections.
- After crimping the positive and negative metal terminals, pull the DC input power cables back to ensure that they are connected securely.
- Insert the crimped metal terminals of the positive and negative power cables into the appropriate positive and negative connectors. Then pull back the DC input power cables to ensure that they are connected securely.
- During DC input power cabling, leave at least 50 mm of slack. The axial tension on PV connectors must not exceed 80 N. Radial stress or torque must not be generated on PV connectors.



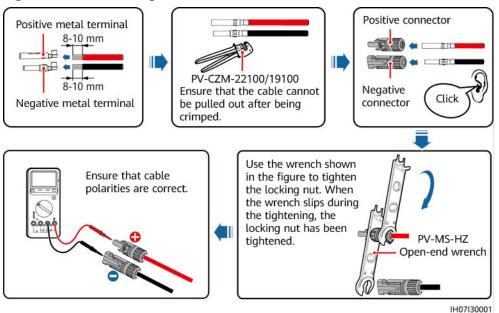

NOTE


- If the PV string is not configured with an optimizer, use a multimeter to measure the voltage at the DC position. The multimeter must have a DC voltage range of at least 600 V. If the voltage is a negative value, the DC input polarity is incorrect and needs correction. If the voltage is greater than 600 V, too many PV modules are configured to the same string. Remove some PV modules.
- If the PV string is configured with an optimizer, check the cable polarity by referring to the Smart PV optimizer quick guide.


Before performing Step 2, ensure that the DC switch is set to OFF.

Step 2 Insert the positive and negative connectors into corresponding DC input terminals on the inverter.

NOTICE

After the positive and negative connectors snap into place, pull the DC input power cables back to ensure that they are connected securely.



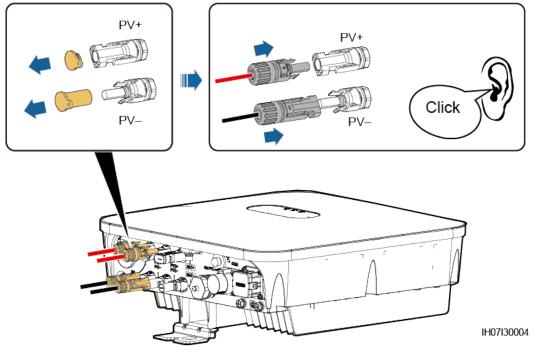

NOTICE

If the DC input power cable is reversely connected and the DC switch is set to ON, do not immediately turn off the DC switch or reconnect the positive and negative connectors. Otherwise, the device may be damaged. The caused device damage is not covered under any warranty or service agreement. Wait until the night when solar irradiance declines and the PV string current drops to below 0.5 A. Then set the DC switch to the OFF position, remove the positive and negative connectors, and correct the polarities of the DC input power cables.


⁻⁻⁻⁻End

Follow-up Procedure

Before removing the positive and negative connectors, ensure that the DC switch is OFF.

To remove the positive and negative connectors from the inverter, insert a disassembly tool into the notch and press the tool with an appropriate force.

Figure 5-16 Removing a DC connector



5.8 (Optional) Connecting Battery Cables

Prerequisites

A DANGER

- Battery short circuits may cause personal injury. The high transient current generated by a short circuit may release a surge of power and cause fire.
- Do not connect or disconnect the battery cable when the inverter is running. Failing to do so may cause electric shocks.
- Before connecting the battery cables, ensure that the DC switch on the inverter and all the switches connecting to the inverter are OFF, and the inverter has no residual electricity. Otherwise, the high voltage of the inverter and battery may result in electric shocks.
- If no battery connects to the inverter, do not remove the watertight cap from the battery terminal. Otherwise, the IP rating of the inverter will be affected. If a battery connects to the inverter, set aside the watertight cap. Reinstall the watertight cap immediately after removing the connector. The high voltage of the battery terminal may result in electric shocks.

A battery switch can be configured between the inverter and the battery to ensure that the inverter can be safely disconnected from the battery.

- Do not connect loads between the inverter and the battery.
- The battery cables should be connected correctly. That is, the positive and negative terminals of the battery connect to the positive and negative battery terminals on the inverter respectively. Otherwise, the inverter may be damaged, or even a fire could happen.

During the installation of the ESS and the inverter, the positive or negative terminal of the ESS may be short-circuited to ground if the power cables are not properly installed or routed. In this case, an AC or DC short circuit may occur and damage the devices. The resulting device damage is not covered under any warranty.

NOTICE

The cabling distance between the battery and the inverter should be less than or equal to 10 meters, and within 5 meters is recommended.

Procedure

Step 1 Assemble the positive and negative connectors by referring to 5.7 Connecting DC Input Power Cables.

- The battery voltage will result in serious injury. Use dedicated insulation tools to connect cables.
- Ensure that cables are correctly connected between the battery terminal and the battery switch, and between the battery switch and the inverter battery terminal.

NOTICE


Cables with high rigidity, such as armored cables, are not recommended as battery cables, because poor contact may be caused by the bending of the cables.

Step 2 Insert the positive and negative connectors into corresponding battery terminals on the inverter.

NOTICE

After the positive and negative connectors snap into place, pull the battery cables back to ensure that they are connected securely.

Figure 5-17 Connecting battery cables

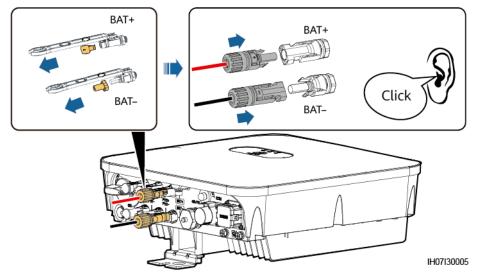

----End

5.9 (Optional) Connecting Signal Cables

Context

NOTICE

When laying out signal cables, separate them from power cables and keep them away from strong interference sources to prevent communication interruption.

Figure 5-18 Signal cable ports

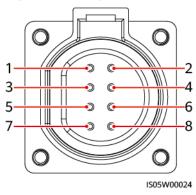


Table 5-3 COM port definition

No.	Label	Definition	Description	
1	485B1	RS485B, RS485 differential signal–	Used to connect to the RS485 signal ports of the cascaded	
2	485A1	RS485A, RS485 differential signal+	inverters, or the EMMA. When cascaded inverters and the EMMA coexist, they share the 485B1 and 485A1 ports.	
3	485B2	RS485B, RS485 differential signal–	Used to connect to the RS485 signal ports on the batteries or power meters. When batteries and power meters coexist, they share the 485B2 and 485A2 ports.	
4	485A2	RS485A, RS485 differential signal+		
5	GND	GND of the enable signal/12V/DI1/DI2	Used to connect to the GND of the enable signal/12V/DI1/DI2 of a battery.	
6	EN+	Enable signal+/12V+	Used to connect to the enable signal of a battery and the positive terminal of 12V.	
7	DI1	Digital input signal 1+	Used to connect to the positive terminal of DI1. It can connect to the DRM0 scheduling signal or serve as a port for rapid shutdown signals.	
8	DI2	Digital input signal 2+	Used to connect to the positive terminal of DI2. It receives feedback signals of the on/off-grid controller	

For details about how to connect signal cables, see SUN2000L-(2KTL-5KTL) and SUN2000-(2KTL-6KTL)-L1 Battery and Smart Power Sensor Quick Guide. You can also scan the QR code to obtain the document.




Communication Networking Mode


NOTE


The power meter and Smart Dongle must be connected to the same inverter.

• Single inverter scenarios

Figure 5-19 Single inverter

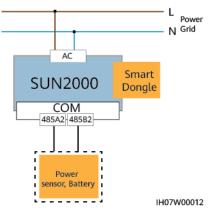



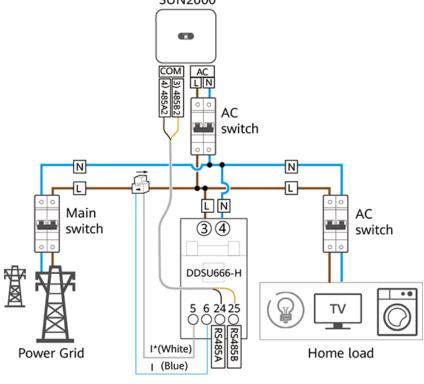

• Inverter cascading scenarios

- In-phase grid connection



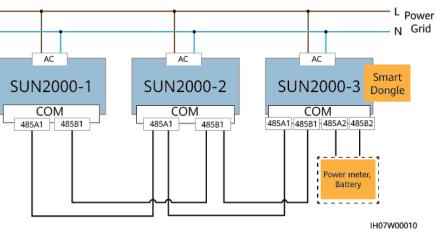


Figure 5-21 In-phase grid connection



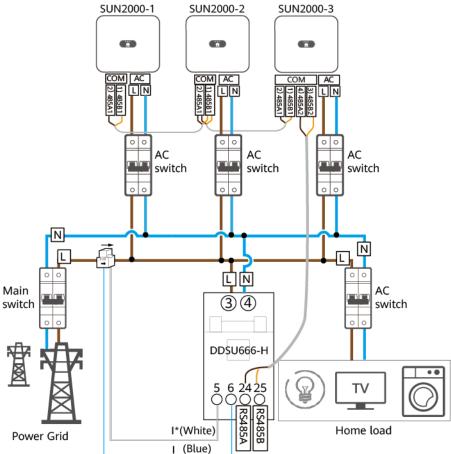

NOTE

- Retain the default baud rates for the DDSU666-H, YDS70-C16, DDSU71 and DDSU1079-CT power meters. If they are changed, the power meters may go offline, generate alarms, or affect the inverter output power.
- The preceding networking uses DDSU666-H as an example. Cable connections for other meter models may vary.
- In cascading scenarios, the inverters are required to connect to the management system through a Smart Dongle.
- In the preceding networking, the inverters are cascaded and support the grid-tied point control function to achieve zero export.
- If the inverters require the grid-tied point control function, they need to be connected to a power meter.
- A single-phase power meter is recommended for the networking with only single-phase inverters.
- If the SUN2000-(2KTL-6KTL)-L1 inverters are cascaded with three-phase inverters, the SUN2000-(2KTL-6KTL)-L1 must be connected to the grid in phase.
- Only one LG battery is supported, and the LG battery must be connected to the inverter where the Smart Dongle is installed.
- LG batteries cannot be connected in cascading scenarios.

Procedure

Step 1 Connect signal cables to corresponding signal connectors.

NOTICE

- Ensure that the protection layer of the cable is in the connector. The surplus core should be cut off from the protection layer.
- Ensure that the exposed core is totally inserted into the cable hole.
- Ensure that the signal cables are connected securely.
- Ensure that the cables are not twisted.
- If multiple signal cables need to be connected to a single connector, ensure that the outer diameters of the signal cables are the same.

Figure 5-23 Crimping two signal cables




Figure 5-24 Crimping three signal cables



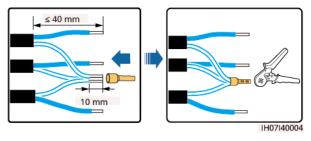


Figure 5-25 Assembling a signal connector (single inverter)

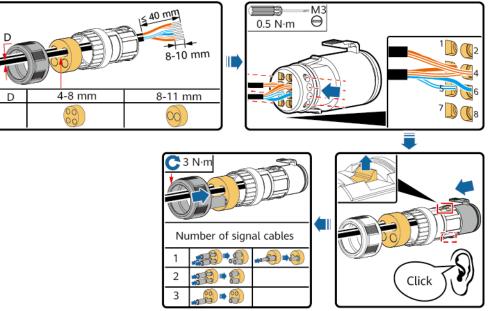

IH07I40001


Figure 5-26 Assembling a signal connector (inverter cascading)

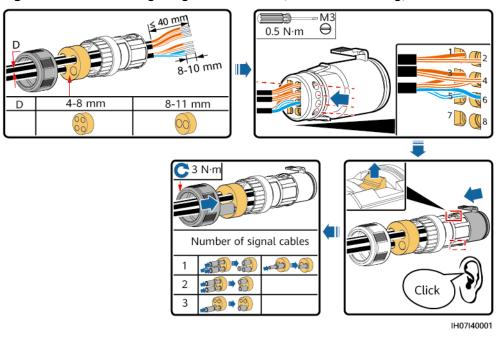


Step 2 Connect the signal connector to the corresponding port.

NOTICE

Ensure that the signal connector is connected securely.



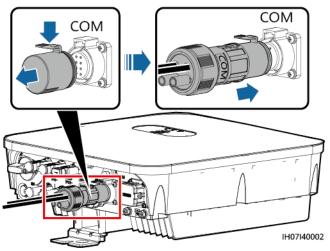

----End

6 System Commissioning

▲ DANGER

• Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.

6.1 Verification Before Power-On

No.	Check Item	Acceptance Criteria
1	Inverter	The inverter is installed correctly and securely.
2	WLAN antenna	The WLAN antenna is installed correctly and securely.
3	Cables routing	Cables are routed properly as required by the customer.
4	Cable tie	Cable ties are evenly distributed and no burr exists.
5	Grounding	The PE cable is connected correctly, securely, and reliably.
6	Switch	The DC switch and all the switches connecting to the inverter are OFF.
7	Cable connection	The AC output power cable, DC input power cable, battery cable, and signal cable are connected correctly, securely, and reliably.
8	Unused terminal and port	Unused terminals and ports are locked by watertight caps.

Table 6-1 Check items and acceptance criteria

No.	Check Item	Acceptance Criteria
9	Installation environment	The installation space is proper, and the installation environment is clean and tidy.

6.2 System Power-On

Prerequisites

Before turning on the AC switch between the inverter and the power grid, use a multimeter to check that the AC voltage is within the allowed range.

NOTICE

Before the equipment is put into operation for the first time, ensure that the parameters are set correctly by professional personnel. Incorrect parameter settings may result in noncompliance with local grid connection requirements and affect the normal operations of the equipment.


NOTICE

- If the DC power supply is connected but the AC power supply is disconnected, the inverter will report a **Grid Loss** alarm. The inverter can start properly only after the power grid recovers.
- If the AC power supply is connected but the battery is not connected, the inverter reports a **Battery Abnormal** alarm.
- If the inverter is connected to LG batteries, turn on the DC switch within 1 minute after the AC switch is turned on. Otherwise, the inverter, connected to the power grid, will shut down and start again.

Procedure

- **Step 1** If the battery port of the inverter is connected to a battery, turn on the auxiliary power switch of the battery and then the battery switch.
- **Step 2** Turn on the AC switch between the inverter and the power grid.
- **Step 3** (Optional) Remove the locking screw from the DC switch.

Figure 6-1 Removing the locking screw from a DC switch

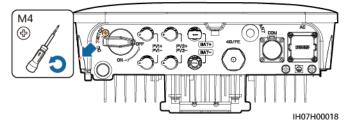

Step 4 Turn on the DC switch between the PV string and the inverter if there is any.

Step 5 Turn on the DC switch at the bottom of the inverter.

Step 6 Observe the LEDs to check the inverter operating status.

Table 6-2 LED indicators 1

Category	Status		Description
Running indicator	LED1	LED2	-
=[]]~ (m) ○ ○ ○ LED1 LED2	Steady green	Steady green	The inverter is operating in grid-tied mode.
	Blinking green at long intervals (on for 1s and then off for 1s)	Off	The DC is on and the AC is off.
	Blinking green at long intervals (on for 1s and then off for 1s)	Blinking green at long intervals (on for 1s and then off for 1s)	Both the DC and AC are on, and the inverter is not exporting power to the power grid.
	Off	Blinking green at long intervals (on for 1s and then off for 1s)	The DC is off and the AC is on.
	Steady orange	Steady orange	The inverter is operating in the off-grid mode.
	Blinking orange slowly	Off	The DC is on, and the inverter has no output in the off-grid mode.
	Blinking orange slowly	Blinking orange slowly	The inverter is operating in the overload in backup mode.
	Off	Off	Both the DC and AC are off.
	Blinking red at short intervals (on for 0.2s and then off for 0.2s)	_	There is a DC environmental alarm, such as an alarm indicating that High String Input Voltage, String Reverse Connection, or Low Insulation Resistance.

Category	Status	Description		
	_	Blinking red at short intervals (on for 0.2s and then off for 0.2s)	There is an AC environmental alarm, such as an alarm indicating Grid Undervoltage, Grid Overvoltage, Grid Overfrequency, or Grid Underfrequency.	
	Steady red	Steady red	Fault.	
Communication	LED3	-		
indicator ≔[_]~ (m) ○ ○ ○	Blinking green at short in then off for 0.2s)	Communication is in progress.		
	Blinking green at long in then off for 1s)	itervals (on for 1s and	The mobile phone is connected to the inverter.	
	Off		There is no communication.	

NOTE

If the off-grid load is overloaded, indicators LED1 and LED2 on the inverter blink orange slowly. Reduce the off-grid load power and manually clear the alarm or until the inverter is recovered. The inverter attempts to restart at an interval of 5 minutes. If the inverter fails to restart for three times, the interval changes to 2 hours. If the inverter is standby in off-grid mode, check the inverter alarms and rectify the fault.

Table 6-3 LED indicators 2

Category	Status		Description	
Device	LED1	LED2	LED3	-
replacement indication	Steady red	Steady red	Steady red	The inverter hardware is faulty. The inverter needs to be replaced.

----End

7 Man-Machine Interaction

7.1 App Commissioning

7.1.1 Downloading the FusionSolar App

• Method 1: Access https://solar.huawei.com using the mobile phone browser and download the latest installation package.

Figure 7-1 Download Mode



- Method 2: Search for FusionSolar on Huawei AppGallery and download the latest installation package.
- Method 3: Scan the following QR code and download the latest installation package.

Figure 7-2 QR code



7.1.2 (Optional) Registering an Installer Account

NOTE

- If you have an installer account, skip this step.
- You can register an account only using a mobile phone only in China.
- The mobile number or email address used for registration is the user name for logging in to the FusionSolar App.

Create the first installer account and create a domain named after the company name.

	< Select role	< Installer registration
FusionSolar A true the username or phone number	I'm an owner Real-time monitoring of plant	Note: If your company has registered an account in the system, you do not need to register again. Ask your administrator to add you to the user list.
Password And	Ask your installer to create an account for you.	Company name
Log In	I'm installer	Mobile number
	n Tap Ceate your account	Username
		Enter the verification code. Send
		Password 3rd
		Confirm password
No scount?		I have read and agree to Terms of Use and Privacy Policy
Turidinselar.huanvel.com		Reling

Figure 7-3 Creating the first installer account

NOTICE

To create multiple installer accounts for a company, log in to the FusionSolar App and tap **Add User** to create an installer account.

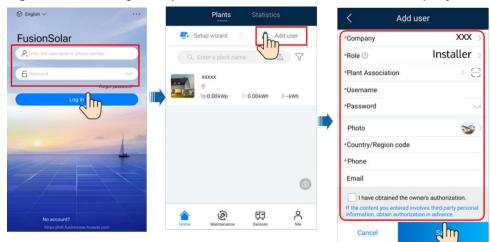


Figure 7-4 Creating multiple installer accounts for the same company

7.1.3 Creating a PV Plant and a User

			Plants		
FusionSolar		∰+ s	eti wizard	2.	
R Enter the username or phone number		q		e	\bigcup_{∇}
6 Password	Sec.	annual A	XXXXXX		
Log in			0 98.0.00kWp	0.00kWh	
	N				
	1				
	+				
					G
No account?			Ø	œ	ዶ
		Home	Maintenance	Devices	Me

Figure 7-5 Creating a PV plant and a user

NOTE

- In the quick settings, the grid code is set to N/A by default (automatic startup is not supported). Set the grid code based on the area where the PV plant is located.
- For details about how to use the site deployment wizard, see *FusionSolar App Quick Guide*. You can scan the QR code to download the quick guide.



7.1.4 (Optional) Setting the Physical Layout of the Smart PV Optimizers

NOTE

- If smart PV optimizers are configured for PV strings, ensure that the smart PV optimizers have been successfully connected to the inverter before performing the operations in this section.
- Check that the SN labels of smart PV optimizers are correctly attached to the physical layout template.
- Take and save a photo of the physical layout template. Keep your phone parallel to the template and take a photo in landscape mode. Ensure that the four positioning points in the corners are in the frame. Ensure that each QR code is attached within the frame.
- For details about the physical layout of smart PV optimizers, see *FusionSolar App Quick Guide*. You can scan the QR code to download the quick guide.



Scenario 1: Setting on the FusionSolar Server Side (Solar Inverter Connected to the Management System)

Step 1 Log in to the FusionSolar App and tap the plant name on the **Home** screen to access the plant screen. Select **Layout**, tap ^(D), and upload the physical layout template photo as prompted.


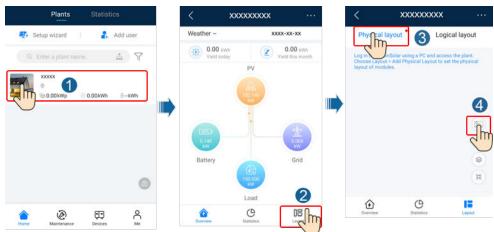


Figure 7-6 Uploading the physical layout template photo (App)

You can also upload the physical layout template photo on the WebUI as follows: Log in to https://intl.fusionsolar.huawei.com to access the WebUI of the FusionSolar Smart PV Management System. On the **Home** page, click the plant name to go to the plant page. Choose **Layout**, click **Click to Upload**, and upload the physical layout template photo.

Figure 7-7 Uploading the physical layout template photo (WebUI)

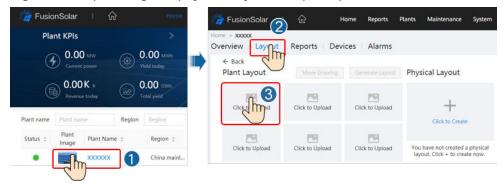

Step 2 Log in to https://intl.fusionsolar.huawei.com to access the WebUI of the FusionSolar Smart PV Management System. On the Home page, click the plant name to go to the plant page. Select Layout. Choose Generate layout, and create a physical layout as prompted. You can also manually create a physical location layout.

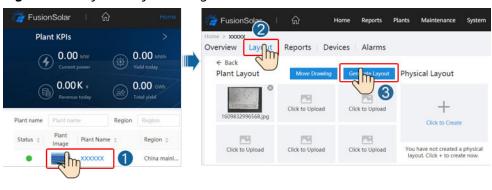


Figure 7-8 Physical layout design of PV modules

----End

Scenario 2: Setting on the Solar Inverter Side (Solar Inverter Not Connected to the Management System)

- **Step 1** Access the **Device Commissioning** screen on the FusionSolar App to set the physical layout of Smart PV Optimizers.
 - 1. Log in to the FusionSolar App. On the **Device Commissioning** screen, choose **Maintenance > Optimizer layout**. The **Optimizer layout** screen is displayed.
 - 2. Tap the blank area. The **Identify image** and **Add PV modules** buttons are displayed. You can use either of the following methods to perform operations as prompted:
 - Method 1: Tap Identify image and upload the physical layout template photo to complete the optimizer layout. (The optimizers that fail to be identified need to be manually bound.)
 - Method 2: Tap Add PV modules to manually add PV modules and bind the optimizers to the PV modules.

<	Maintenance			< Opti	mizer layout	Submit	<	Optimizer layout	Submit
\oplus	Add/Delete device	>		Output power(W) *	Physical	layout *	Output po	wer(W) Physical I	ayout *
	Optimizer yout Physical lat misign of PV modules	>		<u>.</u>	3	5.		3	5
1	Upgrade d	>				Ň		Add PV modules	Ň
٢	Log management	>			0	,		Identify image	,
	Performance data	>				2		(?
(iq)	Optimizer disconnection detection	>							

Figure 7-9 Physical layout design of PV modules

----End

7.2 Parameters Settings

Go to the **Device Commissioning** screen and set inverter parameters. For details about entering the **Device Commissioning** screen, see **B Device Commissioning**.

To set more parameters, tap **Settings**. For details about the parameters, see the *FusionSolar App and SUN2000 App User Manual*. You can also scan the QR code to obtain the document.



7.2.1 Energy Control

7.2.1.1 Grid-tied Point Control

Function

Limits or reduces the output power of the PV power system to ensure that the output power is within the power deviation limit.

Procedure

Step 1 On the home screen, choose **Power adjustment** > **Grid-tied point control**.



Figure 7-10 Grid-tied point control

Table 7-1 Grid-tied point control

Parameter Name			Description
Active power	Unlimited	-	If this parameter is set to Unlimited , the output power of the inverter is not limited and the inverter can connect to the power grid at the rated power.
	Grid connection with zero power	Closed-loop controller	 If multiple inverters are cascaded, set this parameter to SDongle/SmartLogger. If there is only one inverter, set this parameter to Inverter.

Parameter Name		Description
	Limitation mode	Total power indicates export limitation of the total power at the grid-tied point.
	Power adjustment period	Specifies the shortest interval for a single anti-backfeeding adjustment.
	Power control hysteresis	Specifies the dead zone for adjusting the inverter output power. If the power fluctuation is within the power control hysteresis, the power is not adjusted.
	Active power output limit for fail-safe	Specifies the derating value of the inverter active power by percentage. If the Smart Dongle does not detect any meter data or the communication between the Smart Dongle and the inverter is disconnected, the Smart Dongle delivers the derating value of the inverter active power by percentage.
	Communication disconnection fail-safe	In the inverter anti-backfeeding scenario, if this parameter is set to Enable , the inverter will derate according to the active power derating percentage when the communication between the inverter and the Smart Dongle is disconnected for a period longer than Communication disconnection detection time .
	Communication disconnection detection time	Specifies the time for determining the communication disconnection between the inverter and the Dongle.
		This parameter is displayed when Communication disconnection fail- safe is set to Enable.
Grid connection with limited power (kW)	Closed-loop controller	 If multiple inverters are cascaded, set this parameter to SDongle/SmartLogger. If there is only one inverter, set this parameter to Inverter.
	Limitation mode	Total power indicates export limitation of the total power at the grid-tied point.

Parameter Name		Description
	Maximum grid feed-in power	Specifies the maximum active power transmitted from the grid-tied point to the power grid.
	Power adjustment period	Specifies the shortest interval for a single anti-backfeeding adjustment.
	Power control hysteresis	Specifies the dead zone for adjusting the inverter output power. If the power fluctuation is within the power control hysteresis, the power is not adjusted.
	Active power output limit for fail-safe	Specifies the derating value of the inverter active power by percentage. If the Smart Dongle does not detect any meter data or the communication between the Smart Dongle and the inverter is disconnected, the Smart Dongle delivers the derating value of the inverter active power by percentage.
	Communication disconnection fail-safe	In the inverter anti-backfeeding scenario, if this parameter is set to Enable , the inverter will derate according to the active power derating percentage when the communication between the inverter and the Smart Dongle is disconnected for a period longer than Communication disconnection detection time .
	Communication disconnection detection time	Specifies the time for determining the communication disconnection between the inverter and the Dongle.
		This parameter is displayed when Communication disconnection fail- safe is set to Enable.
Grid connection with limited power (%)	Closed-loop controller	• If multiple inverters are cascaded, set this parameter to SDongle/SmartLogger .
		• If there is only one inverter, set this parameter to Inverter .
	Limitation mode	Total power indicates export limitation of the total power at the grid-tied point.

Parameter Name		Description
	PV plant capacity	Specifies the total maximum active power in the inverter cascading scenario.
	Maximum grid feed-in power	Specifies the percentage of the maximum active power of the grid- tied point to the PV plant capacity.
	Power adjustment period	Specifies the shortest interval for a single anti-backfeeding adjustment.
	Power control hysteresis	Specifies the dead zone for adjusting the inverter output power. If the power fluctuation is within the power control hysteresis, the power is not adjusted.
	Active power output limit for fail-safe	Specifies the derating value of the inverter active power by percentage. If the Smart Dongle does not detect any meter data or the communication between the Smart Dongle and the inverter is disconnected, the Smart Dongle delivers the derating value of the inverter active power by percentage.
	Communication disconnection fail-safe	In the inverter anti-backfeeding scenario, if this parameter is set to Enable , the inverter will derate according to the active power derating percentage when the communication between the inverter and the Smart Dongle is disconnected for a period longer than Communication disconnection detection time .
	Communication disconnection detection time	Specifies the time for determining the communication disconnection between the inverter and the Dongle. This parameter is displayed when Communication disconnection fail- safe is set to Enable .

Name	Description
Shutdown at high feed-in power	 The default value is Disable. If this parameter is set to Enable, the inverter shuts down for protection when the grid-connection point power exceeds the threshold and remains in this condition for the specified time threshold.
Upper feed-in power threshold for inverter shutdown (kW)	• The default value is 0 . This parameter specifies the power threshold of the grid-connection point for triggering inverter shutdown.
High feed-in power duration threshold for triggering inverter shutdown (s)	The default value is 20 . This parameter specifies the duration threshold of high feed-in power for triggering inverter shutdown.
	 When High feed-in power duration threshold for triggering inverter shutdown is set to 5, Shutdown at high feed-in power takes precedence.
	 When High feed-in power duration threshold for triggering inverter shutdown is set to 20, Grid connection with limited power takes precedence (when Active power control is set to Grid connection with limited power).
	Shutdown at high feed-in power Upper feed-in power threshold for inverter shutdown (kW) High feed-in power duration threshold for

----End

7.2.1.2 Apparent Power Control on the Inverter Output Side

On the home screen, tap **Settings > Power adjustment** to set inverter parameters.

- XXX- Brid o	-XXX-XX connected +		<	Settings	
Communication status Good WLAN signal	Connection		8	Grid parameters	
Active power	Energy yield of current da	ay	0	Protection parameters	
0.000xx0	0.00 _{0vm}		0	Feature parameters	
Nonthly Energy Yield	Total		Ξ,	Power adjustment	П
0.00own	66.65awto		B	Time setting	<u>~</u> m
(P	0		Ð	Communication configuration	\smile
Alarm management	Quick settings				
슾	83				
Device Monitoring	Maintenance				
Settings	t Power adjustment				

Figure 7-11 Apparent power control

Table 7-2 Apparent power

Parameter	Description	Value Range
Maximum apparent power (kVA)	Specifies the output upper threshold for the maximum apparent power to adapt to the capacity requirements of standard and customized inverters.	[Maximum active power, S _{max}]
Maximum active power (kW)	Specifies the output upper threshold for the maximum active power to adapt to different market requirements.	[0.1, P _{max}]

NOTE

The lower threshold for the maximum apparent power is the maximum active power. To lower the maximum apparent power, lower the maximum active power first.

7.2.1.3 Battery Control

Prerequisites

The screenshots in this chapter are taken in the SUN2000 3.2.00.011 App. The App is being updated. The actual screens may vary.

Function

When the inverter connects to a battery, add the battery and set battery parameters.

Adding a Battery

To add a battery, choose **Maintenance** > **Subdevice management** on the home screen.

Figure 7-12 Adding a battery

< Maintenance			< Subdevice r	nanagement
Subdevice management	ر اس		Power meter	
(1) Upgrade device	\smile ,		Battery	
Log management	>		LUNA2000	ſŀ~
(III) Performance data	>	,	Optimizer	
Battery maintenance	>		Searching completed	Auto search
(b) Inverter ON/OFF OFF : unexpected shutdown				

Parameters Settings

On the home screen, choose **Power adjustment** > **Battery control**, and set the battery parameters and working mode.

	0-XXX-XX	< Battery cont	trol
Communication status Good SIM card signal	Connection succeeded	Working mode	
Active power 1.263ee	Energy yield of current day	Maximum charge power	0.000
Monthly energy yield	Total	Maximum discharge power	0.000
12.40 _(kmb)	164.28 _(kwb)	End-of-charge SOC	0.
Û	R	End-of-discharge SOC	0.
Alarm management	Quick settings	Charge from grid	
_		Maximum charge power of grid	0.000
Device monitoring	Maintenance	Grid charge cutoff SOC	0.
Device monitoring	Mantenance		
ŝ	111		
Settings	Power adjustment		

Figure 7-13 Battery control parameter setting

Parameter	Description	Value Range
Working mode	For details, see the description on the App screen.	 Maximum self- consumption Time-of-use Fully fed to grid

Parameter	Description	Value Range
Maximum charge power (kW)	Retain this parameter to the maximum charge power. Additional configuration is not required.	 Charge: [0, Maximum charge power]
Maximum discharge power (kW)	Retain this parameter to the maximum discharge power. Additional configuration is not required.	 Discharge: [0, Maximum discharge power]
End-of-charge SOC (%)	Set the charge cutoff capacity.	90%–100%
End-of-discharge SOC (%)	Set the discharge cutoff capacity.	0%–20% (When no PV module is configured or the PV modules have no voltage for 24 hours, the minimum value is 15%.)
Charge from grid	If Charge from grid function is disabled by default, comply with the grid charge requirements stipulated in local laws and regulations when this function is enabled.	DisableEnable
Grid charge cutoff SOC	Set the grid charge cutoff SOC.	[20%, 100%]

7.2.1.4 Capacity Control

Prerequisites

The screenshots in this section are captured from the SUN2000 app 6.23.00.125. The actual screens may vary with app updates.

Description

If the inverter connects to an ESS and the ESS working mode is set to **Maximum self-consumption** or **TOU**, you can set capacity control parameters.

Table 7-3 Application Scenario

Applicable Model	Application Scenario
SUN2000-(2KTL-6KTL) -L1	Single inverter + LUNA2000 directly connected to the management system

Applicable Model	Application Scenario
	Single inverter + Smart Dongle (WLAN-FE) + LUNA2000 connected to the management system


Parameter Settings

On the home screen, choose **Power adjustment > Capacity control** and set capacity control parameters.

NOTE

- The capacity control function is unavailable when the energy storage working mode is set to **Fully fed to grid**.
- When capacity control has been enabled, you must first disable capacity control and then set the energy storage working mode to **Fully fed to grid**.

Figure 7-14 Setting capacity control parameters

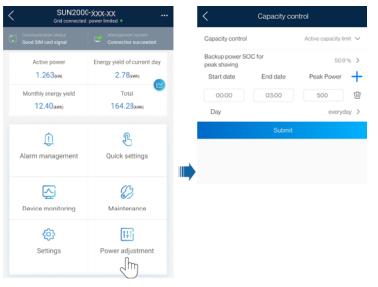

Parameter	Description	Range
Capacity control	 Before enabling Capacity control, set Charge from grid to Enable. Before disabling Charge 	DisableActive capacity limit
	from grid, set Capacity control to Disable.	

Parameter	Description	Range	
Backup power SOC for peak shaving (%)	The value of this parameter affects the peak shaving capability. A larger value indicates stronger peak shaving capability.	[0.0, 100.0] Backup power SOC for peak shaving > Backup power SOC (when BackUp is enabled) > End-of-discharge SOC	
Start date	• Set the peak power range	-	
End dete	 based on the start time and end time. The peak power is configured based on electricity prices in different time segments. You are advised to set the peak power to a low value when the electricity price is high. A maximum of 14 time segments are allowed. 		
Peak power (kW)		[0.000, 1000.000]	

Description

In SmartLogger networking, if the ESS working mode is **Maximum selfconsumption** or **TOU**, you can set **Peak shaving** parameters on the SmartLogger WebUI or FusionSolar app by scanning the QR code on the SmartLogger.

 Table 7-4 Application scenarios

Applicable Model	Application Scenario
SUN2000-(2KTL-6KTL)-L1	SmartLogger + single/cascaded system + LUNA2000 connected to the management system

Parameter Settings

- On the SmartLogger WebUI, choose **Settings** > **Battery control**, and set **Peak shaving**.
- Connect the app to the SmartLogger by scanning the QR code, choose **Power** adjustment > **Peak shaving**, and set related parameters.

- In SmartLogger V300R023C00SPC170 and later versions, **Peak shaving** is displayed only when the export+import meter is connected in the ESS scenario.
- The peak shaving function is unavailable when the ESS working mode is set to **Fully fed to grid**.
- When peak shaving has been enabled, you must first disable it and then set the ESS working mode to **Fully fed to grid**.
- For details about the peak shaving function, see the Introduction to Peak Shaving.

7.2.2 AFCI

Function

If PV modules or cables are not properly connected or damaged, electric arcs may occur, which may cause fire. Huawei inverters provide unique arc detection in compliance with UL 1699B-2018 to ensure the safety of users' lives and property.

This function is enabled by default. The inverter automatically detects arc faults. To disable this function, log in to the FusionSolar App, enter the **Device Commissioning** screen, choose **Settings** > **Feature parameters**, and disable **AFCI**.

NOTE

The AFCI function works only with Huawei optimizers or ordinary PV modules, but does not support third-party optimizers or intelligent PV modules.

Clearing Alarms


The AFCI function involves the **DC arc fault** alarm.

The inverter has the AFCI alarm automatic clearance mechanism. If an alarm is triggered for less than five times within 24 hours, the inverter automatically clears the alarm. If the alarm is triggered for five times or more within 24 hours, the inverter locks for protection. You need to manually clear the alarm on the inverter so that it can work properly.

You can manually clear the alarm as follows:

• Method 1: FusionSolar App

Log in to the FusionSolar App and choose **Me** > **Device commissioning**. On the **Device commissioning** screen, connect and log in to the inverter that generates the AFCI alarm, tap **Alarm management**, and tap **Clear** on the right of the **DC arc fault** alarm to clear the alarm.

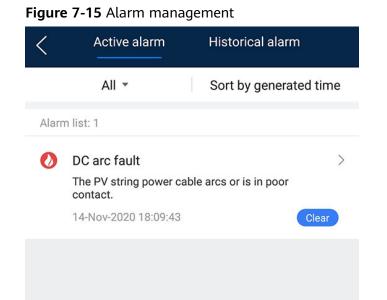

• Method 2: FusionSolar Smart PV Management System

Log in to the FusionSolar Smart PV Management System using a non-owner account, choose **Maintenance** > **Alarm Management**, select the **DC arc fault** alarm, and click **Clear** to clear the alarm.

Figure 7-16 Clearing alarms

🎢 FusionSolar	। ŵ	Home	Monitoring	Reports Pi	lants	Maintenance	/alue-Added Srvices	System	© 1	9 Q	🕐 English	& seeriittis	6	?
Real-Time Status Ala	arm Management	Task Manag	ement			Maintenance								
Alarm Management	Plant Name	Plant Name	De	vice Type All		Real-Time Stat	US	Alarm ID Alarm ID		ocurrence Tir	ne Start date	End date 0	5	
Device Alarm	* Search					Alarm Manage	ment 2							
Active Alarms	Auto	Refresh \odot O	0 0 28	9 9 5		Task Managem	ent					4	Clear	Export
Historical Alarms	Alarm 8	Severity	Plant Name		Device	туре	Device Name	Alarm ID	Alarm Name		Occurrence Til	me o c	operation	
Alarm Configuration	* <mark>З</mark> 🛛 🛛 Мај	ior	plan0720		Inverte	tf.	NV-5UN20000715	2002	DC are fault		2023-07-28 16	5:02:15	@ B	

Switch to the owner account with PV plant management rights. On the home page, click the PV plant name to go to the PV plant page, and click **OK** as prompted to clear the alarm.

7.2.3 IPS Check (for Italy CEI0-21 Grid Code Only)

Function

The Italy CEI0-21 grid code requires an IPS check for the inverter. During the selfcheck, the inverter checks the protection threshold and protection time of the maximum voltage over 10 min (59.S1), maximum overvoltage (59.S2), minimum undervoltage (27.S1), minimum undervoltage (27.S2), maximum overfrequency (81.S1), maximum overfrequency (81.S2), minimum underfrequency (81.S), and minimum underfrequency (81.S2).

Procedure

- **Step 1** On the home screen, choose **Maintenance** > **IPS test** to access the IPS test screen.
- **Step 2** Tap **Start** to start an IPS test. The inverter detects maximum voltage over 10 min (59.S1), maximum overvoltage (59.S2), minimum undervoltage (27.S1), minimum

undervoltage (27.S2), maximum overfrequency (81.S1), maximum overfrequency (81.S2), and minimum underfrequency (81.S1), and minimum underfrequency (81.S2).

Figure 7-17 IPS test			
< Maintenance		Interface Protectistorical	rep
+ Add/Delete device	>	SN 2101075347020120126	
Physical layout design of PV modules	>	IPS state	
(†) Upgrade device	>	v v v F F E)
D Log management	>	Maximum voltage over 10 min (59.S1)	
(III) Performance data		Trip value setting	
Interface Protection System self-test	>	Trip time setting	
Inverter ON/OFF Status:Grid conr		Measurement value	
Restore defaults	lected	Measurement trip time	
(i) Clear alarms		Self-check status	
(f) Clear historical energy yield			
Adjust total energy yield		2	
C Reset		Start	

Table 7-5 IPS test type

IPS Test Type	Description
Maximum voltage over 10 min (59.S1)	The default maximum voltage over 10 min protection threshold is 253 V (1.10 Vn), and the default protection time threshold is 3s.
Maximum overvoltage (59.S2)	The default overvoltage protection threshold is 264.5 V (1.15 Vn), and the default protection time threshold is 0.2s.
Minimum undervoltage (27.S1)	The default undervoltage protection threshold is 195.5 V (0.85 Vn), and the default protection time threshold is 1.5s.
Minimum undervoltage (27.S2)	The default undervoltage protection threshold is 34.5 V (0.15 Vn), and the default protection time threshold is 0.2s.
Maximum overfrequency (81.S1)	The default overfrequency protection threshold is 50.2 Hz, and the default protection time threshold is 0.1s.

IPS Test Type	Description
Maximum overfrequency (81.S2)	The default overfrequency protection threshold is 51.5 Hz, and the default protection time threshold is 0.1s.
Minimum underfrequency (81.S1)	The default underfrequency protection threshold is 49.8 Hz, and the default protection time threshold is 0.1s.
Minimum underfrequency (81.S2)	The default underfrequency protection threshold is 47.5 Hz, and the default protection time threshold is 0.1s.

Step 3 After the IPS test is complete, **IPS State** is displayed as **IPS state success**. Tap **Historical report** in the upper right corner of the screen to view the IPS check report.

----End

7.2.4 DRM (Australia AS4777)

Function

According to Australia AS 4777.2-2015, solar inverters need to support the function of demand response mode (DRM), and DRM0 is a mandatory requirement.

This function is disabled by default.

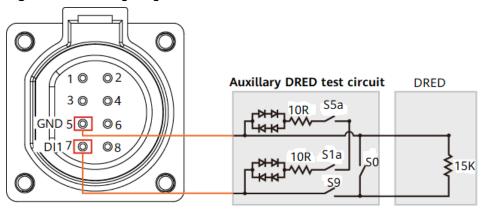


Figure 7-18 Wiring diagram for the DRM function

NOTE

The demand response enabling device (DRED) is a power grid dispatch device.

Mode	Port on the inverter	Requirements
DRM0	Dl1 and GND of the COM port	• When switches S0 and S9 are switched on, the solar inverter should be turned off.
		 When switch S0 is switched off, and switch S9 is switched on, the solar inverter should be grid-tied.

Table 7-6 DRM requirements

Procedure

- **Step 1** On the home page, choose **Settings** > **Feature parameters**.
- Step 2 Set DRM to .

Figure 7-19 DRM

< Settings		Feature parameter	ers
(Grid parameters	>	Soft start/boot time	
Protection parameters	1>	AFCI	0
Feature parameters	>	Soft start time after grid failure	
Power adjustment	>	Night-time hibernation	0
🖓 Time setting	>	Delay upgrade	0
Communication configuration	>	Duration for determining short-time grid disconnection	
,		TCP heartbeat interval	
		TCP frame length	
		Heartbeat period at application layer	2
		DRM	

----End

8 System Maintenance

A DANGER

• Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.

• Before performing maintenance, power off the equipment, follow the instructions on the delayed discharge label, and wait for a period of time as specified to ensure that the equipment is not energized.

8.1 System Power-Off

Precautions

After the inverter powers off, the remaining electricity and heat may still cause electric shocks and body burns. Therefore, put on insulated gloves and begin operating the inverter five minutes after the power-off.

Procedure

- **Step 1** Send a shutdown command on the App.
- **Step 2** Turn off the AC switch between the inverter and the power grid.
- Step 3 Turn off the DC switch at the bottom of the inverter.
- **Step 4** (Optional) Install the locking screw for the DC switch.

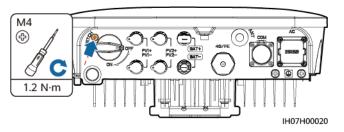


Figure 8-1 Installing a locking screw for the DC switch

- **Step 5** Turn off the DC switch between the inverter and PV strings.
- **Step 6** (Optional) Turn off the battery switch between the inverter and batteries.

----End

8.2 Routine Maintenance

To ensure that the inverter can operate properly for a long term, you are advised to perform routine maintenance on it as described in this chapter.

Before cleaning the inverter, connecting cables, and maintaining the grounding reliability, power off the inverter (see **8.1 System Power-Off** for details).

Check Item	Check Method	Maintenance Interval
System cleanliness	Check periodically that the heat sinks are free from obstacles and dust.	Once every 6 to 12 months
System running status	 Check that the inverter is not damaged or deformed. Check that the inverter operates with no abnormal sound. Check that all inverter parameters are correctly set during operation. 	Once every six months
Electrical connection	 Check that cables are secured. Check that cables are intact, and that in particular, the parts touching the metallic surface are not scratched. Check that unused DC input terminals, battery terminals, COM ports, ANT ports, and Smart Dongle waterproof covers are locked. 	The first inspection is 6 months after the initial commissioning. From then on, the interval can be 6 to 12 months.

Check Item	Check Method	Maintenance Interval
Grounding reliability	Check that ground cables are securely connected.	The first inspection is 6 months after the initial commissioning. From then on, the interval can be 6 to 12 months.

8.3 Troubleshooting

For details about alarms, see the **Inverter Alarm Reference**.

9 Inverter Disposal

9.1 Removing a Inverter

Procedure

- Step 1 Power off the inverter. For details, see 8.1 System Power-Off.
- **Step 2** Disconnect all cables from the inverter, including signal cables, DC input power cables, battery cables, AC output power cables, and PE cables.
- **Step 3** Remove the WLAN antenna or the Smart Dongle from the inverter.
- **Step 4** Remove the inverter from the mounting bracket.
- **Step 5** Remove the mounting bracket.

----End

9.2 Packing a Inverter

- If the original packaging is available, put the inverter inside it and then seal it using adhesive tape.
- If the original packaging is unavailable, put the inverter inside a suitable hard carton and seal it properly.

9.3 Disposing a Inverter

If the inverter service life expires, dispose the inverter according to the local disposal rules for electrical equipment and electronic component waste.

10 Technical Specifications

Efficiency

Technical Specification	SUN2000 -2KTL-L1	SUN2000 -3KTL-L1	SUN2000 -3.68KTL -L1	SUN2000 -4KTL-L1	SUN2000 -4.6KTL- L1	SUN2000 -5KTL-L1	SUN2000 -6KTL-L1
Maximum efficiency	98.2%	98.3%	98.4%	98.4%	98.4%	98.4%	98.4%
European weighted efficiency	96.7%	97.3%	97.3%	97.5%	97.7%	97.8%	97.8%

Input

Technical Specifications	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
Maximum input voltage ^a	600 V						
Maximum input current (per MPPT)	12.5 A						
Maximum short- circuit current (per MPPT)	18 A						
Operating voltage range	80-600 V						
Startup voltage	100 V						
MPPT voltage range	90-560 V						
Rated input voltage	360 V						

Technical Specifications	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
Power supply	2						
Number of MPPTs	2						
Battery normal voltage	450 Vdc	450 Vdc					
Battery voltage range	350-600 V	/dc					
Battery maximum current	15 A	15 A					
Battery type	Li-ion						
Note a: The maximum	n input volta	age include	s the PV in	put voltage	and batter	y input vol	tage.

Output (On grid)

Technical Specifications	SUN200 0-2KTL- L1	SUN2000 -3KTL-L1	SUN20 00-3.68 KTL-L1	SUN2000 -4KTL-L1	SUN200 0-4.6KT L-L1	SUN20 00-5K TL-L1	SUN200 0-6KTL- L1
Rated output power	2000 W	3000 W	3680 W	4000 W	4600 W	5000 W ^a	6000 W
Maximum apparent power	2200 VA	3300 VA	3680 VA	4400 VA	5000 VA ^b	5500 VA ^c	6000 VA
Rated output voltage	220 V /230 V /240 V	220 V /230 V /240 V	230 V /240 V	220 V /230 V /240 V	220 V /230 V /240 V	220 V /230 V /240 V	220 V /230 V /240 V
Rated power grid frequency	50 Hz/60	Hz					
Maximum output current	10 A	15 A	16 A	20 A	23 A	25 A	27.3 A
Rated output current	9.1 A /8.7 A /8.3 A	13.6 A /13.0 A /12.5 A	16.0 A /15.3 A	18.2 A /17.4 A /16.7 A	20.9 A /20.0 A /19.2 A	22.7 A /21.7 A /20.8 A	27.3 A /26.1 A /25.0 A
Rated apparent power	2 kVA	3 kVA	3.68 kVA	4 kVA	4.6 kVA	5 kVA	6 kVA
Inrush current	10 A	15 A	16 A	20 A	23 A	25 A	27.3 A

Technical Specifications	SUN200 0-2KTL- L1	SUN2000 -3KTL-L1	SUN20 00-3.68 KTL-L1	SUN2000 -4KTL-L1	SUN200 0-4.6KT L-L1	SUN20 00-5K TL-L1	SUN200 0-6KTL- L1
Max output fault current	30.12 A	45.18 A	55.42 A	60.24 A	69.28 A	75.3 A	90.37 A
Max output overcurrent protection	12 A	18 A	19.2 A	24 A	27.6 A	30 A	32.76 A
Power factor	0.8 leadin	g and 0.8 lag	gging				
Maximum total harmonic distortion (rated power)	≤ 3%						
Note a: The rated out	put power i	s 5000 W fo	r the AS47	77 grid code	2.		
Note b: The maximum apparent power is 4600 VA for the VDE-AR-N 4105 grid code, and 5000 VA for the AS4777 grid code.							
Note c: The maximum	n apparent j	power is 500	0 VA for th	ne AS4777 g	rid code.		

Output (Off grid)

Technical Specifications	SUN200 0-2KTL- L1	SUN2000 -3KTL-L1	SUN20 00-3.68 KTL-L1	SUN2000 -4KTL-L1	SUN200 0-4.6KT L-L1	SUN20 00-5K TL-L1	SUN200 0-6KTL- L1
Rated apparent power	2000 VA	3000 VA	3680 VA	4000 VA	4600 VA	5000 VA	5000 VA
Peak apparent power	110%, 10 s						

Protection

Technical Specifications	SUN20 00-2K TL-L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
Anti-islanding protection	Supporte	Supported					
DC reverse polarity protection	Supporte	Supported					
Insulation resistance detection	Supported						

Technical Specifications	SUN20 00-2K TL-L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
Residual current monitoring unit (RCMU)	Supporte	ed					
AC short-circuit protection	Supporte	ed					
AC overcurrent protection	Supporte	ed					
Overtemperature protection	Supporte	ed					
DC surge protection	Supporte	ed					
AC surge protection	Supporte	ed					
AC overvoltage protection	Supporte	ed					
Arc fault protection	Supporte	ed					
AFCI	Supporte	ed					
Active anti-islanding method	AFD						
Protection class	I						
Overvoltage category	II(DC)/III(AC)						
PV and AC port	DVCC						
Communication port	DVCA						

Communications

Technical Specifications	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1	
Display	LED indica	ators; WLAN	N+App					
WLAN	Supported	Supported						
RS485	Supported	I						
Maximum RS485 communication distance	1000 m							

Technical Specifications	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
Communications expansion module	WLAN-FE	WLAN-FE (optional)/4G (optional)					

Common Parameters

Technical Specification	SUN20 00-2KT L-L1	SUN20 00-3KT L-L1	SUN20 00-3.68 KTL-L1	SUN20 00-4KT L-L1	SUN20 00-4.6 KTL-L1	SUN20 00-5KT L-L1	SUN2000-6KT L-L1	
Тороlоду	Non-Isola	Non-Isolation						
IP rating	IP65							
Cooling mode	Natural o	cooling						
Dimensions (H x W x D)	365 mm x 365 mm x 156 mm (including the mounting bracket)							
Weight	12 kg							
Operating temperature	the					+60°C (derated when the temperature is higher than		
Humidity	0–100% RH							
Operating altitude	0–4000 r	n (derated	l above 20	00 m)				

Wireless Communication Parameters

Specifications	Inverter Built- in WiFi	WLAN-FE Smart Dongle	4G Smart Dongle
Frequency	2400-2483.5 MHz	SDongleA-05: 2400-2483.5 MHz	 SDongleA-03-CN: Supports LTE-FDD: B1/B3/B8. Supports DC-HSPA+/HSPA+/HSPA/ UMTS: B1/B5/B8/B9. Supports TD-SCDMA: B34/B39. Supports GSM/GPRS/EDGE: 900 MHz/ 1800 MHz. SDongleA-03-EU: Supports LTE-FDD: B1/B3/B7/B8/B20. Supports UTE-TDD: B38/B40. Supports WCDMA/HSDPA/HSUPA/ HSPA+: B1/B8. Supports GSM/GPRS/EDGE: 900 MHz/ 1800 MHz. SDongleB-06-EU (WiFi): 2400-2483.5 MHz Supports LTE-FDD: B1/B3/B5/B8. Supports LTE-FDD: B1/B3/B5/B8. Supports LTE-TDD: B7/B20/B28/B38/B40/B41. Supports GSM/GPRS/EDGE: 900 MHz/ 1800 MHz.

Specifications	Inverter Built- in WiFi	WLAN-FE Smart Dongle	4G Smart Dongle
Protocol	WLAN	SDongleA-05:	SDongleA-03-CN:
standard	802.11b/g/n	WLAN 802.11b/g/n	 Supports LTE-FDD (with receive diversity): B1/B3/B5/B8.
			 Supports LTE-TDD (with receive diversity): B34/B38/B39/B40/B41.
			• Supports WCDMA: B1/B5/B8.
			• Supports GSM: 900 MHz/1800 MHz.
			Supports digital audio.
			SDongleA-03-EU:
			 Supports LTE-FDD (with receive diversity): B1/B3/B7/B8/B20/B28.
			 Supports LTE-FDD (with receive diversity): B38/B40/B41.
			• Supports WCDMA: B1/B8.
			• Supports GSM: 900 MHz/1800 MHz.
			Supports digital audio.
			SDongleB-06-EU (WiFi): WLAN 802.11b/g/n
			SDongleB-06-EU (4G):
			 Supports LTE FDD (with receive diversity): B1/B3/B5/B8.
			• Supports LTE-TDD (with receive diversity): B7/B20/B28/B38/B40/B41.
			• Supports GSM: 900 MHz/1800 MHz.
			Supports digital audio.

Specifications	Inverter Built- in WiFi	WLAN-FE Smart Dongle	4G Smart Dongle
Bandwidth	20 MHz/40 MHz	20 MHz/40 MHz	LTE features:
	(optional)	(optional)	• Supports a maximum of 3GPP R8 non- CA Cat 4 FDD and TDD.
			 Supports 1.4 MHz/3 MHz/5 MHz/10 MHz/15 MHz/20 MHz RF bandwidth.
			• Supports MIMO in the downlink.
			 LTE-FDD: maximum downlink rate of 150 Mbit/s and maximum uplink rate of 50 Mbit/s
			 LTE-TDD: maximum downlink rate of 130 Mbit/s and maximum uplink rate of 30 Mbit/s
			UMTS features:
			 Supports 3GPP R7 HSDPA+, HSDPA, HSUPA, and WCDMA.
			 Supports QPSK and 16QAM modulation.
			 HSDPA+: maximum downlink rate of 21 Mbit/s
			 HSUPA: maximum uplink rate of 5.76 Mbit/s
			 WCDMA: maximum downlink rate of 384 kbit/s and maximum uplink rate of 384 kbit/s
			GSM features:
			GPRS:
			• Supports GPRS multislot class 12.
			• Coding schemes: CS-1, CS-2, CS-3, and CS-4
			 Maximum downlink rate: 85.6 kbit/s; maximum uplink rate: 85.6 kbit/s
			EDGE:
			• Supports EDGE multislot class 12.
			• Supports GMSK and 8-PSK modulation and coding schemes.
			 Downlink coding format: MCS 1–9
			Uplink coding format: MCS 1–9
			 Maximum downlink rate: 236.8 kbit/s; maximum uplink rate: 236.8 kbit/s
			SDongleB-06-EU (WiFi): 20 MHz/40 MHz (optional)

Specifications	Inverter Built- in WiFi	WLAN-FE Smart Dongle	4G Smart Dongle
Maximum transmit power	≤ 20 dBm EIRP	≤ 20 dBm EIRP	 Class 4 (33 dBm±2 dB), EGSM900 frequency band
			 Class 1 (30 dBm±2 dB), DCS1800 frequency band
			 Class E2 (27 dBm±3 dB), EGSM900 8- PSK
			 Class E2 (26 dBm±3 dB), DCS1800 8- PSK
			 Class 3 (24 dBm+1/-3 dB), WCDMA frequency band
			 Class 3 (23 dBm±2 dB), LTE-FDD frequency band
			 Class 3 (23 dBm±2 dB), LTE-TDD frequency band
			SDongleB-06-EU (WiFi): ≤ 20 dBm EIRP

A Grid Code

D NOTE

The grid codes are subject to change. The listed codes are for reference only.

Table A-1	Grid	Code
-----------	------	------

Nationa l/ Regiona l Grid	Descripti on	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
Code VDE-AR- N-4105	Germany LV power grid	Support ed	Support ed	Support ed	Support ed	Support ed	-	-
UTE C 15-712- 1(A)	France mainland power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
UTE C 15-712- 1(B)	France island power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
UTE C 15-712- 1(C)	France island power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
CEI0-21	Italy power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
RD1699/ 661	Spain LV power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed

Nationa l/ Regiona l Grid Code	Descripti on	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
C10/11	Belgium power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	-
IEC6172 7	IEC 61727 LV (50 Hz)	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
IEC6172 7-60Hz	IEC 61727 LV (60 Hz)	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
TAI-PEA	Thailand grid-tied standard power grid	-	Support ed	-	-	-	Support ed	-
TAI-MEA	Thailand grid-tied standard power grid	-	Support ed	-	-	-	Support ed	-
EN50549 -LV	Ireland power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
EN50549 -SE	Sweden LV	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
ABNT NBR 16149	Brazil power grid	Support ed	Support ed	-	Support ed	-	Support ed	Support ed
Fuel- Engine- Grid	Diesel generator hybrid power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
Fuel- Engine- Grid-60H z	Diesel generator hybrid power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed

Nationa l/ Regiona l Grid Code	Descripti on	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
Austria	Austrian power grid	Support ed	Support ed	Support ed	-	-	-	-
G98	UK G98 power grid	Support ed	Support ed	Support ed	Support ed	-	-	-
G99- TYPEA- LV	UK G99_Type A_LV power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
NRS-097 -2-1	South Africa Power Grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
SWITZER LAND- NA/ EEA:202 0-LV230	Switzerla nd	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
SINGAP ORE	Singapor e LV power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
HONGK ONG	Hong Kong LV power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
DUBAI	DUBAI LV power grid	Support ed	Support ed	Support ed	Support ed	-	Support ed	Support ed
Island- Grid	Off-grid grid code	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
DENMA RK- EN50549 -DK1- LV230	Denmark power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed

Nationa l/ Regiona l Grid Code	Descripti on	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
DENMA RK- EN50549 -DK2- LV230	Denmark power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
AUSTRA LIA- AS4777_ A-LV230	Australia power grid	Support ed	Support ed	-	Support ed	Support ed	Support ed	Support ed
AUSTRA LIA- AS4777_ B-LV230	Australia power grid	Support ed	Support ed	-	Support ed	Support ed	Support ed	Support ed
AUSTRA LIA- AS4777_ C-LV230	Australia power grid	Support ed	Support ed	-	Support ed	Support ed	Support ed	Support ed
AUSTRA LIA- AS4777_ NZ- LV230	Australia power grid	Support ed	Support ed	-	Support ed	Support ed	Support ed	Support ed
OMAN	Oman low- voltage power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
ANRE	Romania low- voltage power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
FINLAN D- EN50549 -LV230	Finland power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed
Philippin es	Philippine s low- voltage power grid	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed	Support ed

Nationa l/ Regiona l Grid Code	Descripti on	SUN200 0-2KTL- L1	SUN200 0-3KTL- L1	SUN200 0-3.68K TL-L1	SUN200 0-4KTL- L1	SUN200 0-4.6KT L-L1	SUN200 0-5KTL- L1	SUN200 0-6KTL- L1
NEW CALEDO NIA- LV230	New Caledoni a power grid	-	Support ed	-	-	-	Support ed	Support ed


B Device Commissioning

Step 1 Access Device Commissioning screen.



Figure B-1 Method 1: before login (not connected to the Internet)

Figure B-2 Method 2: after login (connected to the Internet)

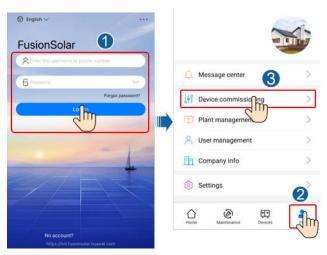

Step 2 Connect to the solar inverter WLAN and log in to the device commissioning screen as the **installer** user.

NOTICE

- If the mobile phone is directly connected to the inverter, the visible distance between theinverter0 and the mobile phone must be less than 3 m when a built-in antenna is used and less than 50 m when an external antenna is used to ensure the communication quality between the App and theinverter0. The distances are for reference only and may vary with mobile phones and shielding conditions.
- When connecting the inverter to the WLAN over a router, ensure that the mobile phone and inverter are in the WLAN coverage of the router and the inverter is connected to the router.
- The router supports WLAN (IEEE 802.11 b/g/n, 2.4 GHz) and the WLAN signal reaches the inverter.
- The WPA, WPA2, or WPA/WPA2 encryption mode is recommended for routers. Enterprise-level encryption is not supported (for example, public hotspots requiring authentication such as airport WLAN). WEP and WPA TKIP are not recommended because these two encryption modes have serious security defects. If the access fails in WEP mode, log in to the router and change the encryption mode of the router to WPA2 or WPA/WPA2.

NOTE

- Obtain the initial password for connecting to the solar inverter WLAN from the label on the side of the solar inverter.
- Set the password at the first login. To ensure account security, change the password periodically and keep the new password in mind. Not changing the initial password may cause password disclosure. A password left unchanged for a long period of time may be stolen or cracked. If a password is lost, devices cannot be accessed. In these cases, the user is liable for any loss caused to the PV plant.
- When you access the **Device Commissioning** screen of the inverter for the first time, you need to manually set the login password because the inverter does not have an initial login password.

----End

C Resetting Password

- **Step 1** Check that the AC and DC sides of the inverter are both powered on, and indicators *■* and *w* are steady green or blinking slowly for more than 3 minutes.
- **Step 2** Complete the following operations within 4 minutes:

Turn off the AC switch and set **DC SWITCH** to **OFF** at the bottom of the inverter. If the inverter is connected to a battery, turn off the battery switch. Wait until all LED indicators on the inverter panel turn off.

Turn on the AC switch and set **DC SWITCH** to **ON**. Wait about 90s and check that indicator \mathbf{w} is blinking green slowly.

Turn off the AC switch and set **DC SWITCH** to **OFF**. Wait until all LED indicators on the inverter panel turn off.

Turn on the AC switch and set **DC SWITCH** to **ON**. Wait until all LED indicators on the inverter panel blink and then turn off after 30s.

- **Step 3** Reset the password within 10 minutes. (If no operation is performed within 10 minutes, all parameters of the inverter remain unchanged.)
 - 1. Wait until indicator r blinks green slowly.
 - 2. Connect to the app using the initial WLAN hotspot name (SSID) and initial password (PSW), which can be obtained from the label on the side of the inverter.
 - 3. On the login screen, set a new password and log in to the app.

Figure C-1 Setting the password

-	
	1
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	
staller	\sim
nter your password.	545
rity level:	
nter the password again.	544

- **Step 4** Set router and management system parameters to implement remote management.
 - Setting router parameters

Log in to the FusionSolar app, choose **Device Commissioning** > **Settings** > **Communication configuration** > **Router connection settings**, and set router parameters.

Figure	C-2 Se	etting	router	parameters

<	Settings		<	Communication configuration		C Router connection sett	
🛞 Grid pa	rameters	>	((t*	Inverter WLAN settings	2		
Protect	ion parameters	>	K	Router connection settings	>		-3
Feature	parameters	>	:::	R\$485_1	>	WLAN	~
B Power	adjustment	>	E	Management System Configuration	>	Password	~
🕞 Time s	etting	1	•	Dongle parameter settings	>	DHCP	
†₊ Comm	unication configuration	>				IP address	
						Subnet mask	

• Setting management system parameters

Log in to the FusionSolar app, choose **Device Commissioning** > **Settings** > **Communication configuration** > **Management System Configuration**, and set management system parameters.

Figure C-3 Setting management system parameters

< Settings		< Communication configuration	Management system Connect
(意) Grid parameters	>		Connect disconnected
Protection parameters	>	Router connection settings >	- 3
Feature parameters	>	📰 RS485_1	Domain name >
Power adjustment	>	Management System Configuration	Port
(Time setting	1	Dongle parameter settings	SSL encryption
\hat{T}_{g} Communication configuration	>		Registration code Encrypted certificate management SN

• (Optional) Resetting the WLAN password

Log in to the FusionSolar app, choose **Device Commissioning** > **Settings** > **Communication configuration** > **Inverter WLAN settings**, and reset the WLAN password.

Figure C-4 Resetting	the	WLAN	password
----------------------	-----	------	----------

<	Settings		<	Communication configurat	ion	Inverter WLAN setting	ngs Finish
۲	Grid parameters	>	([(•	Inverter WLAN settings	>	WLAN name	9
E9	Protection parameters	>	<	Router connection settings	2	Encryption mode	3
0	Feature parameters	>		R\$485_1	>	New password Security level:	
	Power adjustment	>	<u></u>	Management System Configuration	>	Confirm new	
Co	Time setting	1		Dongle parameter settings	>	Antenna switch mode	~
t ₄	Communication configuration	>				WLAN AP	~
						SSID broadcast	~
						Gateway	٥
						Subnet mask	0

----End

D Rapid Shutdown

When all PV modules connected to the solar inverter are configured with optimizers, the PV system shuts down quickly and reduces the output voltage of the PV string to below 30 V within 30 seconds. If optimizers are configured for some PV modules, the rapid shutdown function is not supported.

Perform the following step to trigger rapid shutdown:

- Method 1: Use the rapid shutdown function. Set Dry contact function to DI Rapid Shutdown. Connect the access switch to pins 7 and 5 of the inverter communications terminal. The switch is turned off by default. When the switch is turned on, rapid shutdown is triggered.
- Method 2: Turn off the AC switch between the solar inverter and the power grid. (If the inverter supports the off-grid function and Off-grid mode is enabled by choosing Settings > Feature parameters on the home screen, turning off the AC switch will not trigger a rapid shutdown.)
- Method 3: Turn off the DC switch at the bottom of the inverter. (If an extra DC switch is connected to the input side of the inverter, turning off this DC switch will not trigger rapid shutdown.)
- Method 4: If **AFCI** is enabled, the inverter automatically detects arc faults, triggering a rapid shutdown.

Locating Insulation Resistance Faults

If the ground resistance of a PV string connected to a solar inverter is too low, the solar inverter generates a **Low Insulation Resistance** alarm.

To locate the fault, connect each PV string to a solar inverter, power on and check the solar inverter, and locate the fault based on the alarm information reported by the FusionSolar App. If a system is not configured with any optimizer, skip the corresponding operations. Perform the following steps to locate an insulation resistance fault.

NOTICE

If two or more ground insulation faults occur in a single PV string, the following method cannot locate the fault. You need to check the PV modules one by one.

- **Step 1** The AC power supply is connected, and set the DC switch at the bottom of the solar inverter to OFF. If the solar inverter connects to batteries, wait for 1 minute, and turn off the battery switch and then the auxiliary power switch of the battery.
- Step 2 Connect each PV string to the solar inverter and set the DC switch to ON. If the solar inverter status is Shutdown: Command, choose Device Commissioning > Maintenance > Inverter ON/OFF on the App and send a startup command.
- Step 3 Log in to the FusionSolar App and choose My > Device Commissioning. On the Device Commissioning screen, connect and log in to the solar inverter, and access the Alarm management screen. Check whether the Low Insulation Resistance alarm is reported.
 - If the Low Insulation Resistance alarm is not reported one minute after the DC is supplied, choose Device Commissioning > Maintenance > Inverter ON/OFF on the App and send a shutdown command. Set the DC switch to OFF and go to Step 2 to connect another PV string to the solar inverter for a check.
 - If a **Low Insulation Resistance** alarm is still reported one minute after the DC is supplied, check the percentage for possible short-circuit positions on the **Alarm details** page and go to **Step 4**.


Figure E-1 Alarm details

<	Alarm details
Alarm inf	ormation
Alarm nan Low insula	tion resistance
Alarm gen	eration time
Alarm ID	Cause ID
2062	1
Alarm se Major	verity
Possible	cause
2. The PV	array is short-circuited to ground; array is in a moist environment and the power ot well insulated to ground;

D NOTE

- The positive and negative terminals of a PV string are connected to the PV+ and PVterminals of the solar inverter. The PV- terminal represents a possibility of 0% for the short-circuit position and the PV+ terminal represents a possibility of 100% for the short-circuit position. Other percentages indicate that the fault occurs on a PV module or cable in the PV string.
- Possible fault position = Total number of PV modules in a PV string x Percentage of possible short-circuit positions. For example, if a PV string consists of 14 PV modules and the percentage of the possible short-circuit position is 34%, the possible fault position is 4.76 (14 x 34%), indicating that the fault is located near PV module 4, including the previous and the next PV modules and the cables of PV module 4. The solar inverter has a detection precision of ±1 PV module.

Figure E-2 Definition of the percentage of the short-circuit position

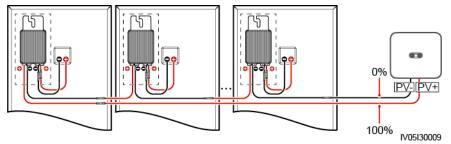

- **Step 4** Set the DC switch to OFF and check whether the connector or DC cable between the possible faulty PV modules and the corresponding optimizers, or those between the adjacent PV modules and the corresponding optimizers are damaged.
 - If yes, replace the damaged connector or DC cable, set the DC switch to ON, and view the alarm information.
 - If the Low Insulation Resistance alarm is not reported one minute after the DC is supplied, the inspection on the PV string is complete. Choose Device Commissioning > Maintenance > Inverter ON/OFF on the App and send a shutdown command. Set the DC switch to OFF. Go to Step 2 to check other PV strings. Then go to Step 8.
 - If the **Low Insulation Resistance** alarm is still reported one minute after the DC is supplied, go to **Step 5**.
 - If not, go to **Step 5**.
- **Step 5** Set the DC switch to OFF, disconnect the possible faulty PV modules and corresponding optimizers from the PV string, and connect a DC extension cable with an MC4 connector to the adjacent PV modules or optimizers. Set the DC switch to ON and view the alarm information.

- If the Low Insulation Resistance alarm is not reported one minute after the DC is supplied, the fault occurs on the disconnected PV module and optimizer. Choose Device Commissioning > Maintenance > Inverter ON/OFF on the App and send a shutdown command. Go to Step 7.
- If the **Low Insulation Resistance** alarm is still reported one minute after the DC is supplied, the fault does not occur on the disconnected PV module or optimizer. Go to **Step 6**.
- **Step 6** Set the DC switch to OFF, reconnect the removed PV module and optimizer, and repeat **Step 5** to check the adjacent PV modules and optimizers.
- **Step 7** Determine the position of the ground insulation fault.
 - 1. Disconnect the possible faulty PV module from the optimizer.
 - 2. Set the DC switch to OFF.
 - 3. Connect the possible faulty optimizer to the PV string.
 - Set the DC switch to ON. If the solar inverter status is Shutdown: Command, choose Device Commissioning > Maintenance > Inverter ON/OFF on the App and send a startup command. Check whether the Low Insulation Resistance alarm is reported.
 - If the Low Insulation Resistance alarm is not reported one minute after the solar inverter is powered on, the PV module is faulty. Choose Device Commissioning > Maintenance > Inverter ON/OFF on the App and send a shutdown command.
 - If the Low Insulation Resistance alarm is still reported one minute after the solar inverter is powered on, the optimizer is faulty.
 - Set the DC switch to OFF. Replace the faulty component to rectify the insulation resistance fault. Go to Step 2 to check other PV strings. Then go to Step 8.
- Step 8 If the solar inverter connects to batteries, turn on the auxiliary power switch of the battery and then the battery switch. Set the DC switch to ON. If the solar inverter status is Shutdown: Command, choose Device Commissioning > Maintenance > Inverter ON/OFF on the App and send a startup command.

----End

Al Energy Management Assistant (EMMA)

The AI Energy Management Assistant (EMMA) provides intelligent energy scheduling and management functions. Based on big data analysis, it accurately predicts the power generation and consumption curves of households, and intelligently stores, purchases, and sells electricity to achieve optimal system performance, improve the utilization rate of green power, and maximize financial benefits.

• Method 1: FusionSolar Smart PV Management System WebUI

When the system determines that the plant meets the conditions for enabling the EMMA function, the **EMMA** dialog box is displayed. You can enable the EMMA function as prompted. If you select **Not Now**, you can click

next to **EMMA** and enable the EMMA function as prompted.

• Method 2: FusionSolar app

On the **Overview** screen, if the system determines that the plant meets the



conditions for enabling the EMMA function, is displayed in the energy flow diagram. You can tap this icon to enable the EMMA function. Alternatively, tap ... in the upper right corner and then tap **EMMA**.

D NOTE

- Only owners have the permission to enable the EMMA function. After the EMMA function is enabled, owners and installers can view the relevant revenue and energy forecast and analysis.
- For details, see the user manuals of the FusionSolar Smart PV Management System and FusionSolar app.

G Contact Information

If you have any questions about this product, please contact us.

Regio n	Country/ Region	Email	Tel
Europ	France	eu_inverter_support@huawei.com	0080033888888
е	Germany		
	Spain		
	Italy		
	United Kingdom		
	Netherla nds		
	Others	For details, visit solar.huawei.com.	
Asia	Australia	eu_inverter_support@huawei.com	1800046639
Pacifi c	Türkiye	eu_inverter_support@huawei.com	-
	Malaysia	apsupport@huawei.com	0080021686868 /1800220036
	Thailand		(+66) 26542662 (charged at local call rates)
			1800290055 (free in Thailand)
	China	solarservice@huawei.com	400-822-9999
	Others	apsupport@huawei.com	0060-3-21686868

Table G-1 Customer service contact information

Regio n	Country/ Region	Email	Tel
Japan	Japan	solarsupportjp@huawei.com	0120258367
India	India	indiaenterprise_TAC@huawei.com	1800 103 8009
South Korea	South Korea	koreainverter@huawei.com	-
North Ameri	United States	eu_inverter_support@huawei.com	1-877-948-2934
са	Canada	eu_inverter_support@huawei.com	1-855-482-9343
Latin Ameri ca	Mexico	la_inverter_support@huawei.com	018007703456 /0052-442-4288288
	Argentina		0-8009993456
	Brazil		0-8005953456
	Chile		800201866 (only available on fixed- line)
	Others		0052-442-4288288
Middl e East and	Egypt	eu_inverter_support@huawei.com	08002229000 /0020235353900
and Africa	United Arab Emirates		08002229000
	South Africa		0800222900
	Saudi Arabia		8001161177
	Pakistan		0092512800019
	Morocco		0800009900
	Others		0020235353900

NOTE

EU Representative Information: Huawei Technologies Hungary Kft. Add.: HU-1133 Budapest, Váci út 116-118., 1. Building, 6. floor. Email: hungary.reception@huawei.com

Acronyms and Abbreviations

Α	
AC	alternating current
D	
DC	direct current
DCI	direct current identification
F	
FRT	fault ride through
Н	
HVRT	high voltage ride-through
I	
ID	identifier
L	
LED	light amitting diada
	light emitting diode
LVRT	low voltage ride-through
Μ	
MAC	Media Access Control
МРРТ	maximum power point tracking
Ρ	
PE	protective earthing
	proceeding cardining

PV	photovoltaic
R	
RCMU	residual current monitoring unit
RH	relative humidity
S	
SN	serial number